 


4 SEATER CIRCULAR DINING TABLE

Stock number: 401X-9W

Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

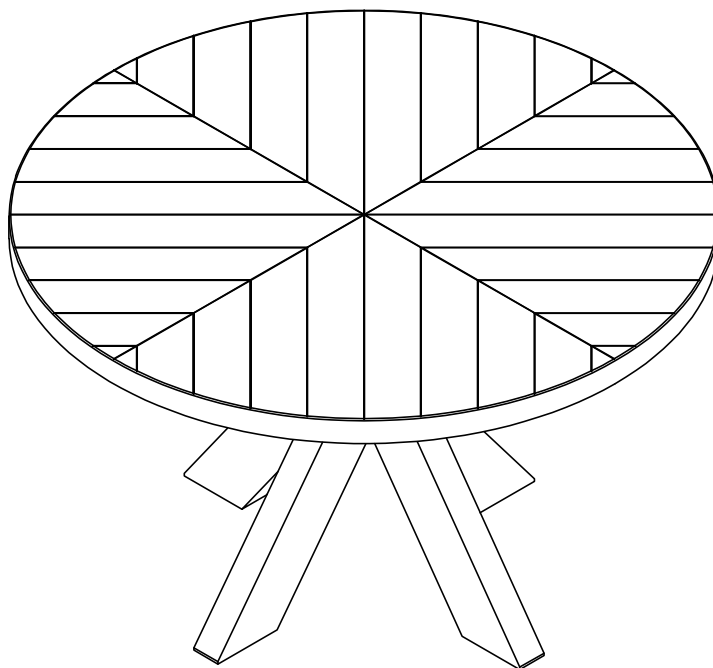

 
Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

Necessary Tools :



(Included)

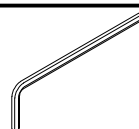

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

 
This product takes approximately **20 MINUTES** to assemble with **2 PEOPLE** .

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product

All assembly should be performed on a flat, stable, clean and soft surface.

The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

IMPORTANT: Retain these instructions for future reference.

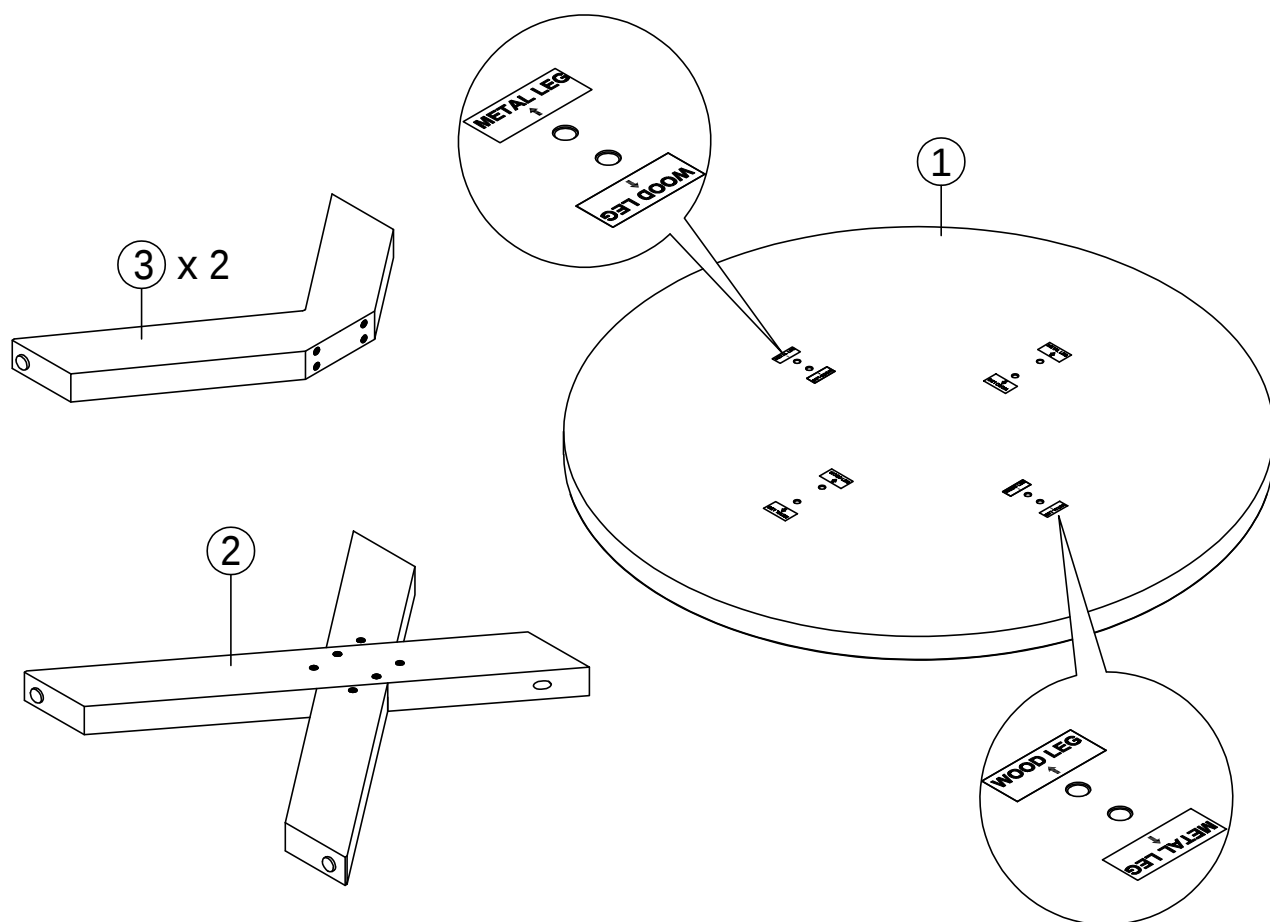

Fittings and parts checklist

Item	Description	Qty.	Item	Description	Qty.
1	Table top	x 1	3	Wooden leg B	x 2
2	Wooden leg A	x 1			
A	Countersunk bolt M8 x 30mm	x 20	E	Flat washer Ø8 x Ø17 x 1.6mm	x 4
B	Metal plate	x 2	F	Large allen key M5 x 30 x 110mm	x 1
C	Hex head bolt M8 x 65mm	x 4	G	Small allen key M4 x 30 x 110mm	x 1
D	Lock washer Ø8.4 x 2mm	x 4			

Step By Step Assembly Instructions

 
Step 1

- 1.1 : Lay all parts on a flat, stable, clean and soft surface.
- 1.2 : Attach metal plates (B) onto wooden legs B (3) using 8x countersunk bolts (A) as shown. Ensure the pre-drilled holes on wooden legs B (3) are aligned correctly to the holes on metal plates (B). Use an allen key (F) to turn fittings (A) clockwise to fix.
- 1.3 : Attach wooden legs B (3) onto wooden leg A (2) using 12x countersunk bolts (A) as shown. Ensure the pre-drilled holes on wooden legs B (3) are aligned correctly to the holes on wooden leg A (2). Use an allen key (F) to turn fittings (A) clockwise to fix. Do not fully tighten.


Fitting




A x 20




B x 2

 

F x 1

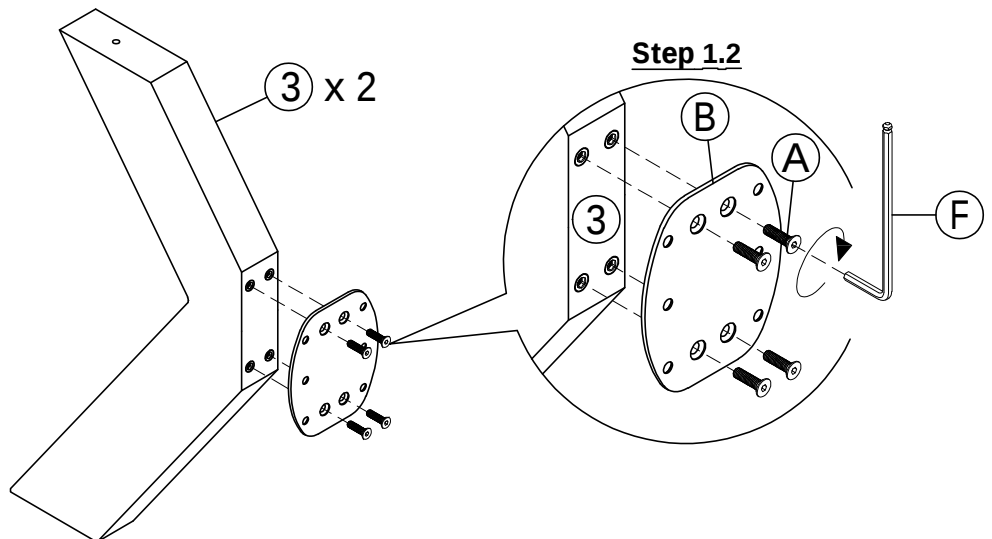 

 
Step 1.3

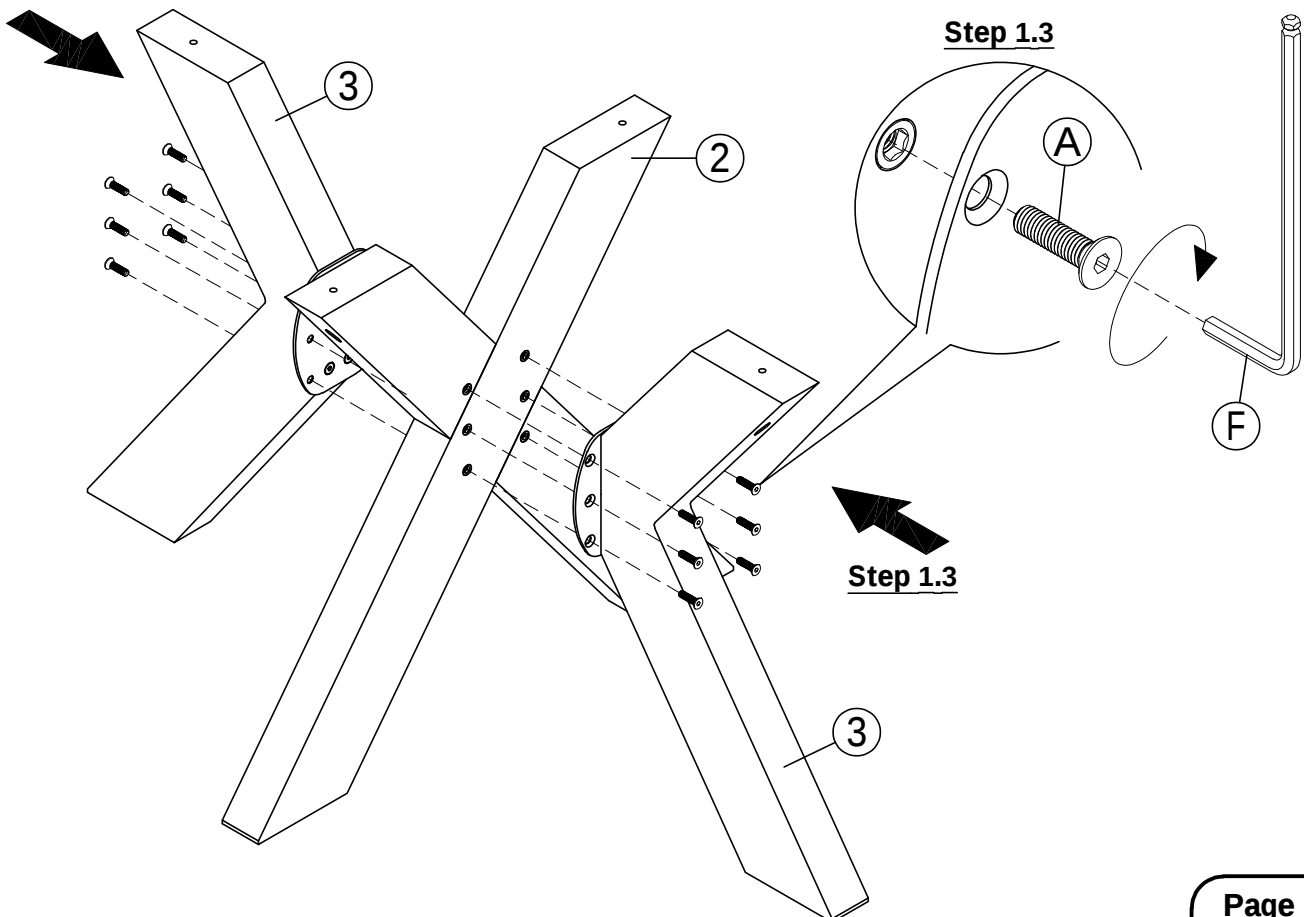

Step By Step Assembly Instructions

- Step 2** 2.1 : Attach the structure assembled in **Step 1** onto table top (1) as shown. Ensure the pre-drilled holes on wooden leg A (2) and wooden legs B (3) are aligned correctly to the holes on table top (1) before attaching.
- 2.2 : Secure wooden leg A (2) and wooden legs B (3) to the holes with the 'WOOD LEG' label onto the table top (1) using 4x hex head bolts (C), 4x lock washers (D), 4x flat washers (E) as shown. Use an allen key (G) to turn fittings (C) clockwise to fix.
- Note: Position all bolts (C) on all wooden legs before full tightening.**
- 2.3 : Re-tightening.
- 2.4 : Stand the unit upright.

 Fitting




C x 4




D x 4




 
E x 4




F x 1

 

G x 1

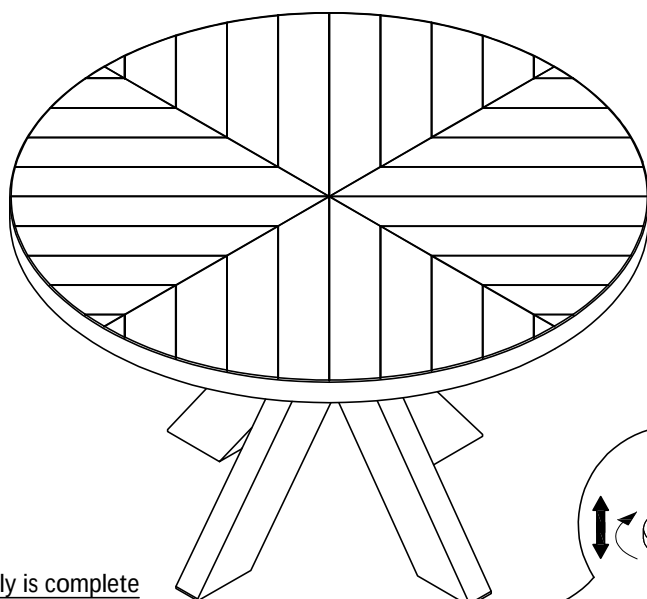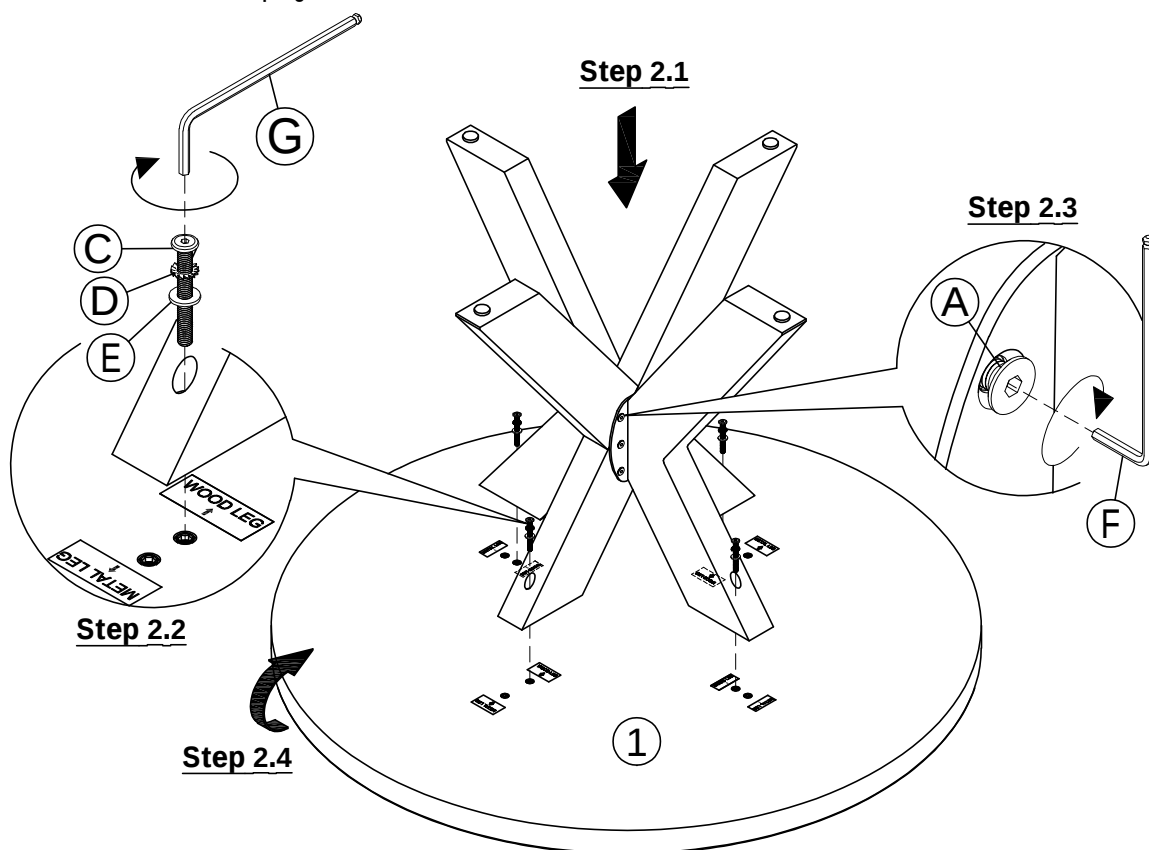  

Assembly is complete

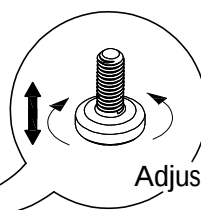 

Adjustable Plastic Glide

Page : 4