


1 DRAWER NIGHTSTAND

Stock number: 3052-71

Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

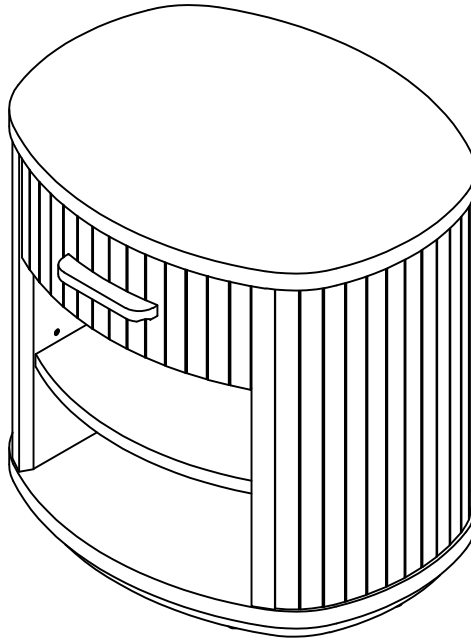

Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

Necessary Tools :



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.


This product takes approximately **10 MINUTES** to assemble with **1 PEOPLE**.

All assembly should be performed on a flat, stable, clean and soft surface.



This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product

The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

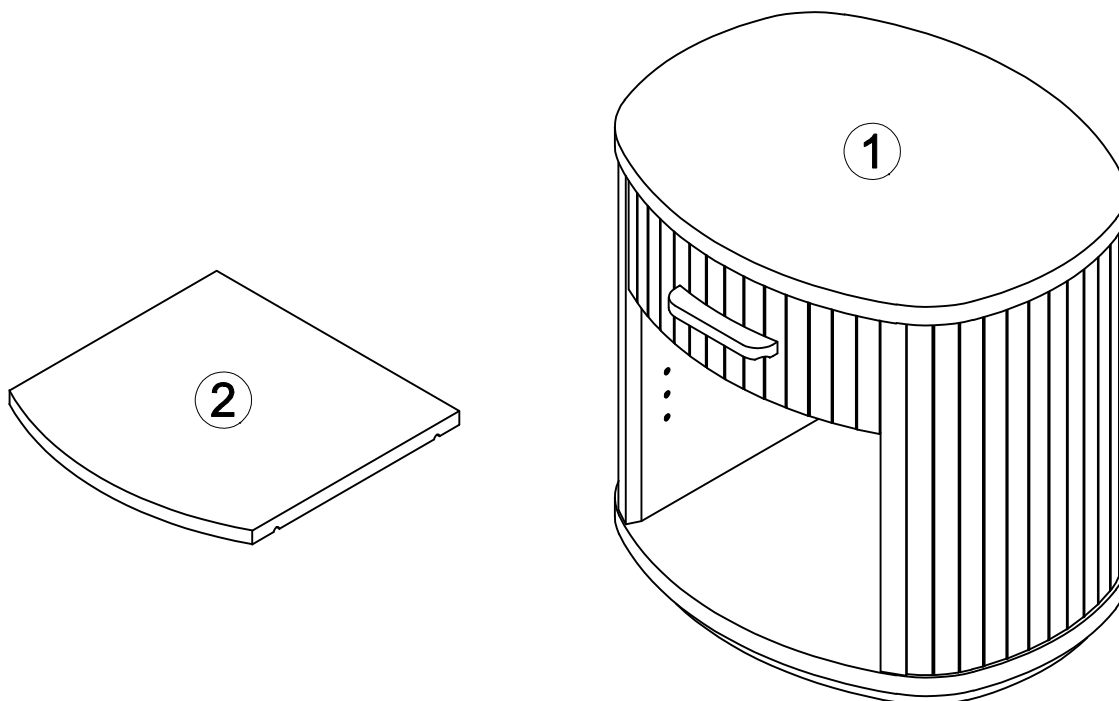IMPORTANT: Retain these instructions for future reference.



Fittings and parts checklist

Item		Description	Qty.	Item		Description	Qty.
1	Top unit		x 1	A	Felt Ø20x6mm		x 6
2	Adjust Shelf		x 1	B	Shelf pin		x 4


Step By Step Assembly Instructions

- Step 1**
- 1.1 : Lay all parts on a flat, stable, clean and soft surface.
 - 1.2 : Remove the plastic from 6x felts (A) and stick felts (A) onto under top unit (1) as shown.
 - 1.3 : Stand the unit upright

Fitting



A x 6

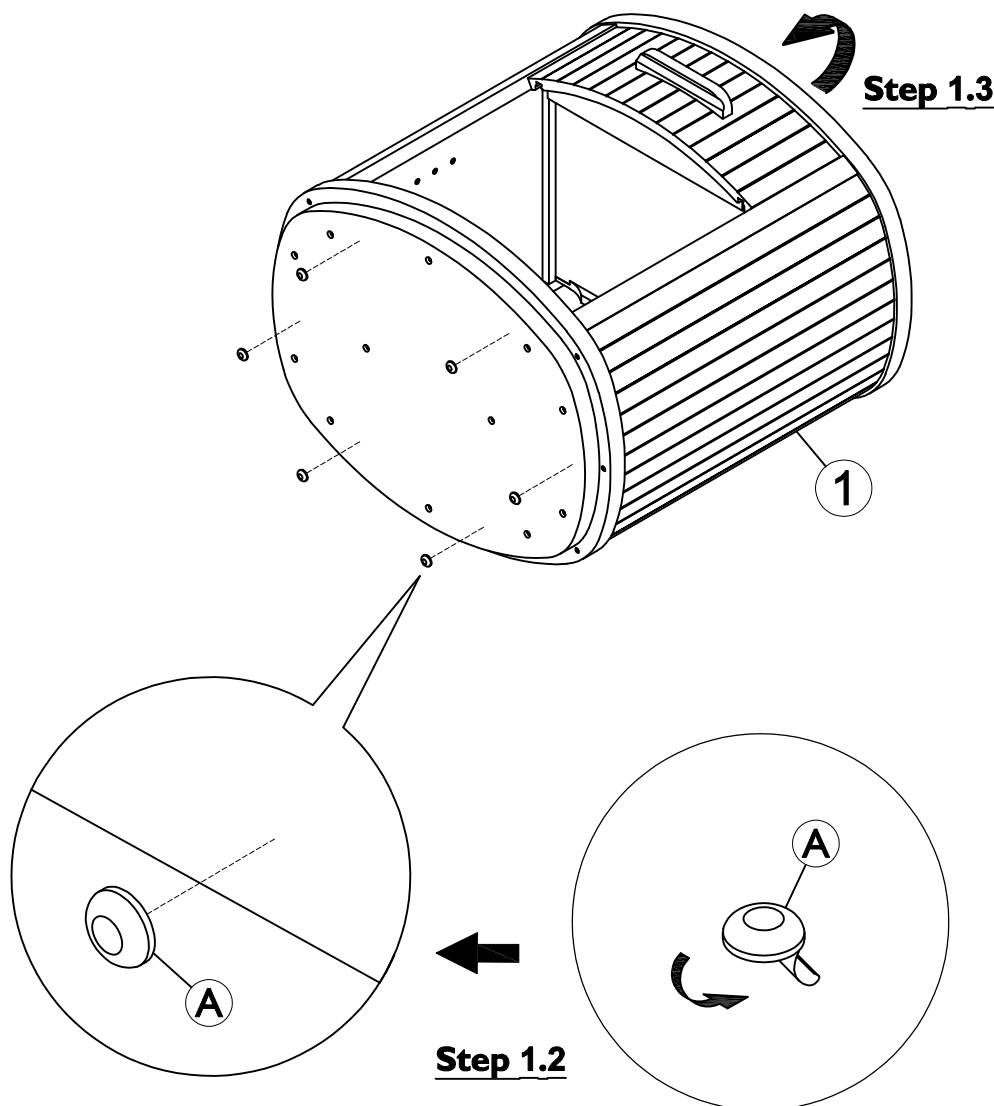



Step By Step Assembly Instructions

- Step 2**
- 2.1 : Screw 4x shelf pins (B) into the inset fittings on partition as shown.
 - 2.2 : Slide adjustable shelf (2) into the top unit (1) as shown. Ensure the notches on adjustable shelf (2) are facing down.
 - 2.3 : Lower the adjustable shelf (2) onto the pins of shelf pins (B) as shown.

Fitting



B x 4

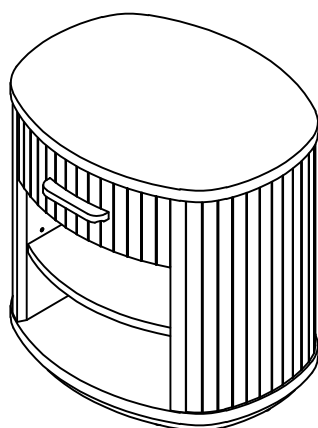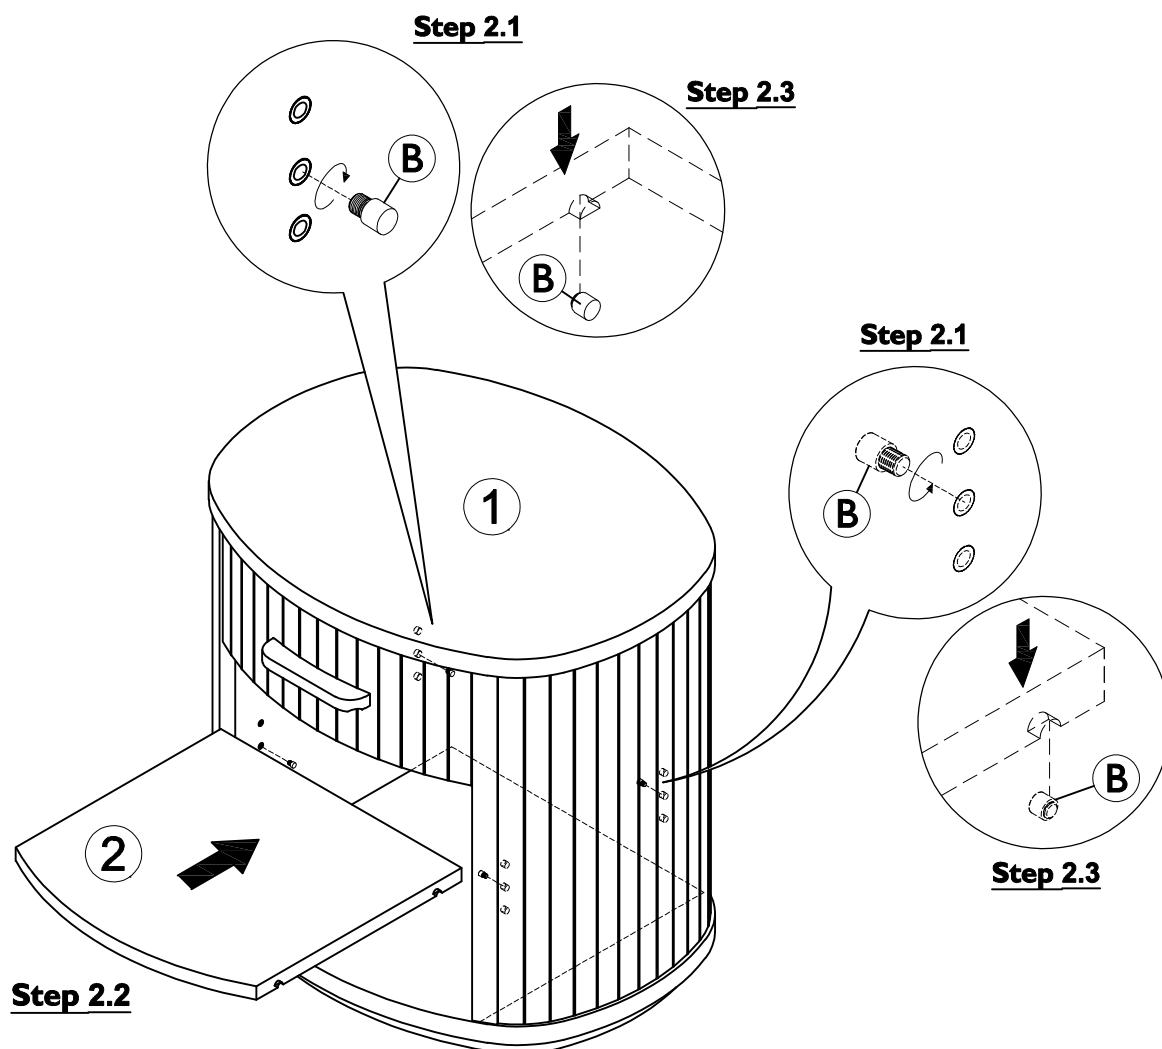


Assembly is complete




UNDERMOUNT DRAWER GLIDE ADJUSTMENT INSTRUCTION

ASSEMBLE


Lay the drawer bottom onto the slide then push the drawer into the cabinet

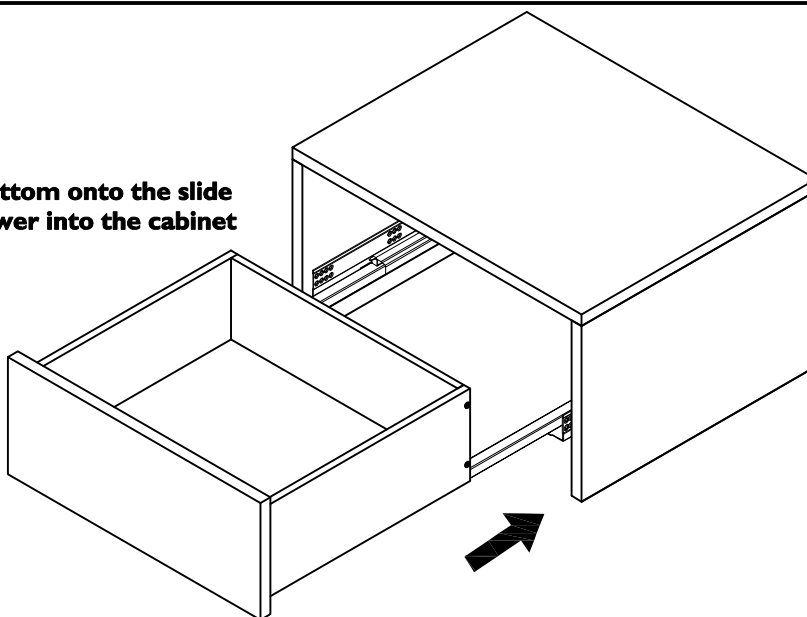

HEIGHT ADJUSTMENT

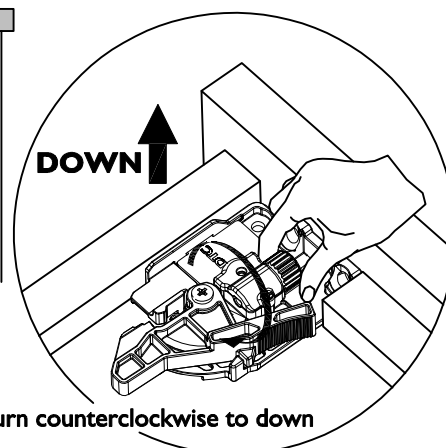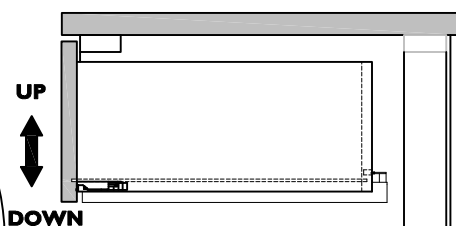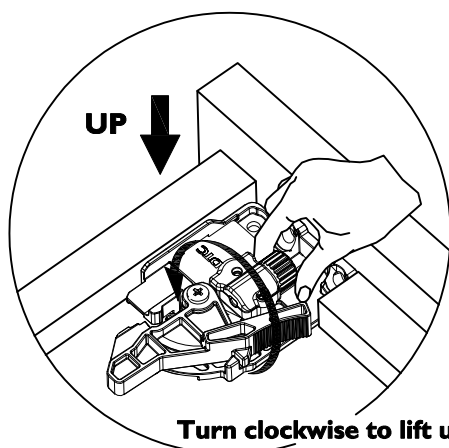

REMOVE

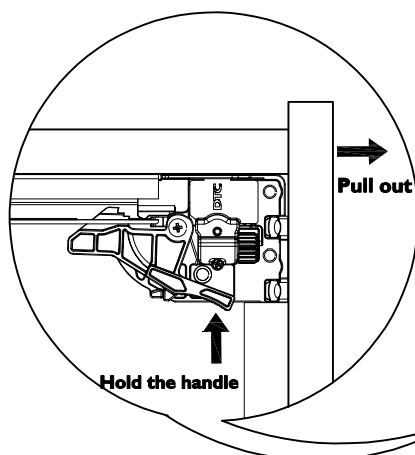

For removal, extend the runner all the way out. Unlock by hold the handle and pull out the drawer.

