


# DRESSING TABLE

Stock number: 3052-90

Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

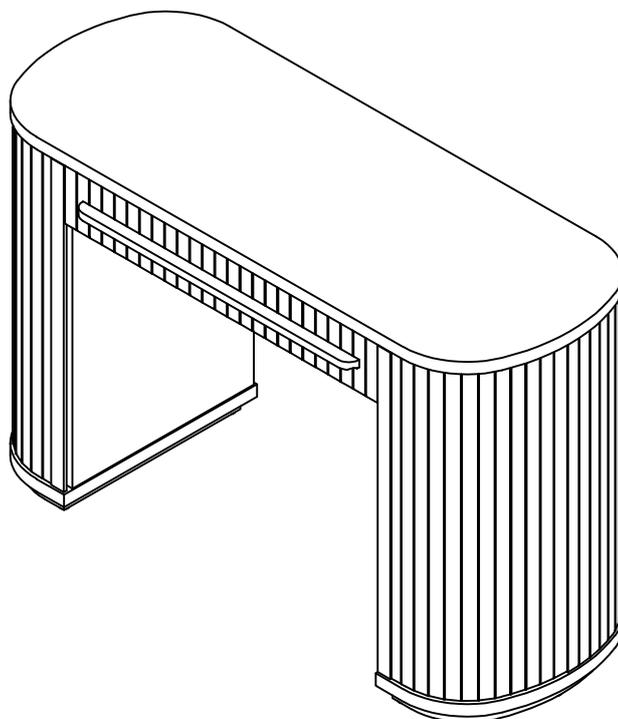

## Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

### Necessary Tools :



(Included)



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

This product takes approximately **30 MINUTES** to assemble with **2 PEOPLE**.

All assembly should be performed on a flat, stable, clean and soft surface.


This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product

The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.






**IMPORTANT:** Retain these instructions for future reference.

Page : 1

IW-17-3052-06-7-0

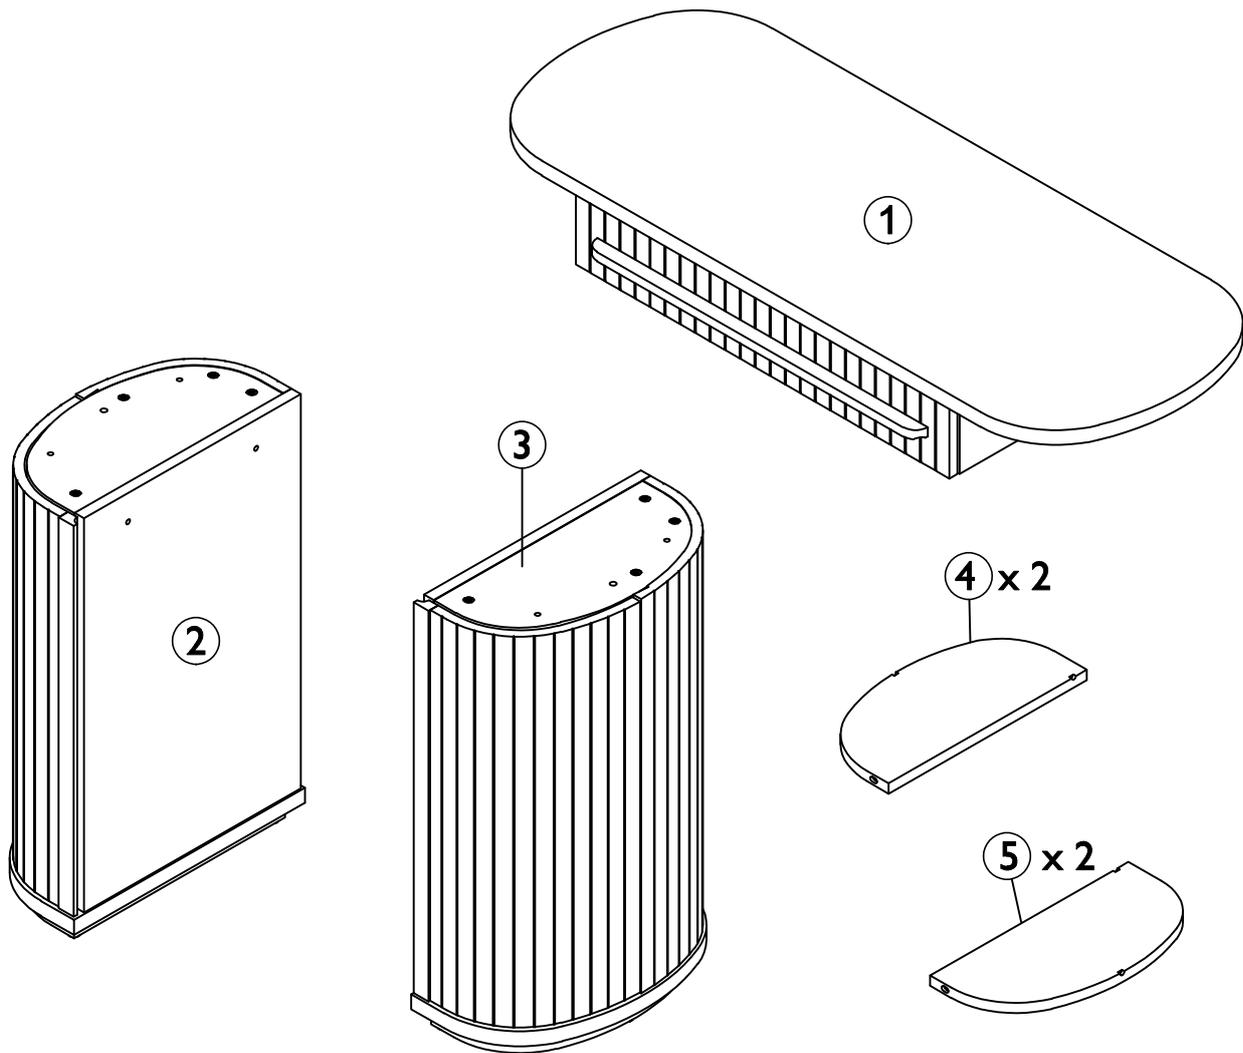

## Fittings and parts checklist

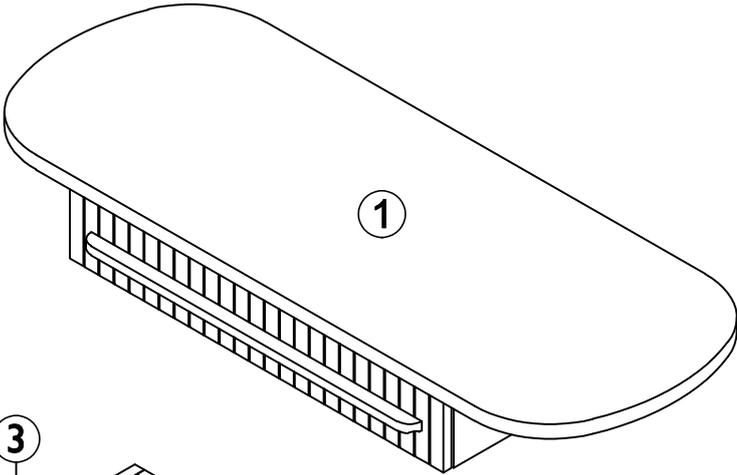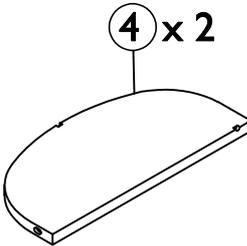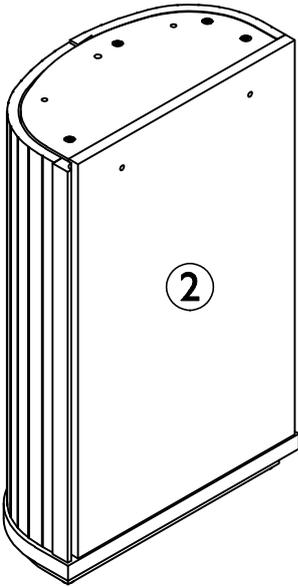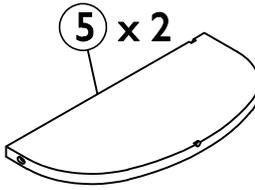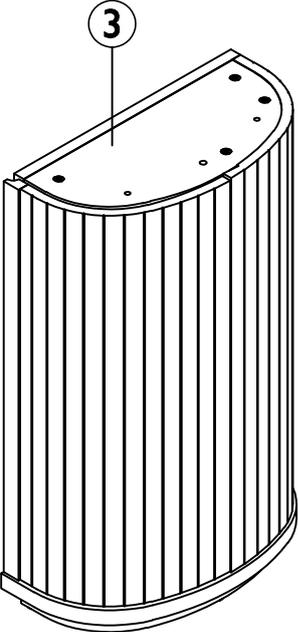Item	Description		Qty.		Item	Description		Qty.
<b>1</b>	Top frame		x 1		<b>4</b>	Removable shelf left		x 2
<b>2</b>	Side frame left		x 1		<b>5</b>	Removable shelf right		x 2
<b>3</b>	Side frame right		x 1					
<b>A</b>	Dowel Ø10 x 30mm		x 2		<b>C</b>	Allen key M4 x 30 x 110mm		x 1
<b>B</b>	Hex head bolt M8x30mm		x 8		<b>D</b>	Shelf pin		x 12


# Step By Step Assembly Instructions

- Step 1**
- 1.1 : Lay all parts on a flat, stable, clean and soft surface.  
1.2 : Insert 2x wooden dowels (A) into the pre-drilled holes on side frame left (2) & side frame right (3) as shown.


Fitting



A x 2

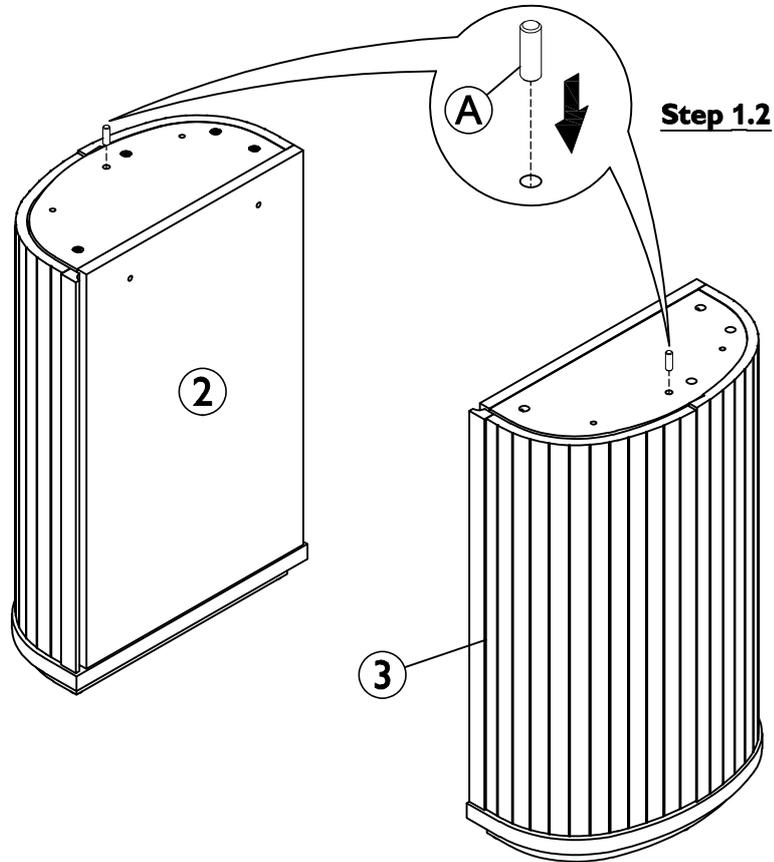

- Step 2**
- Pull out the drawers as shown. (For removal, extend the runner all the way out. Unlock by hold the handle and pull out the drawer).

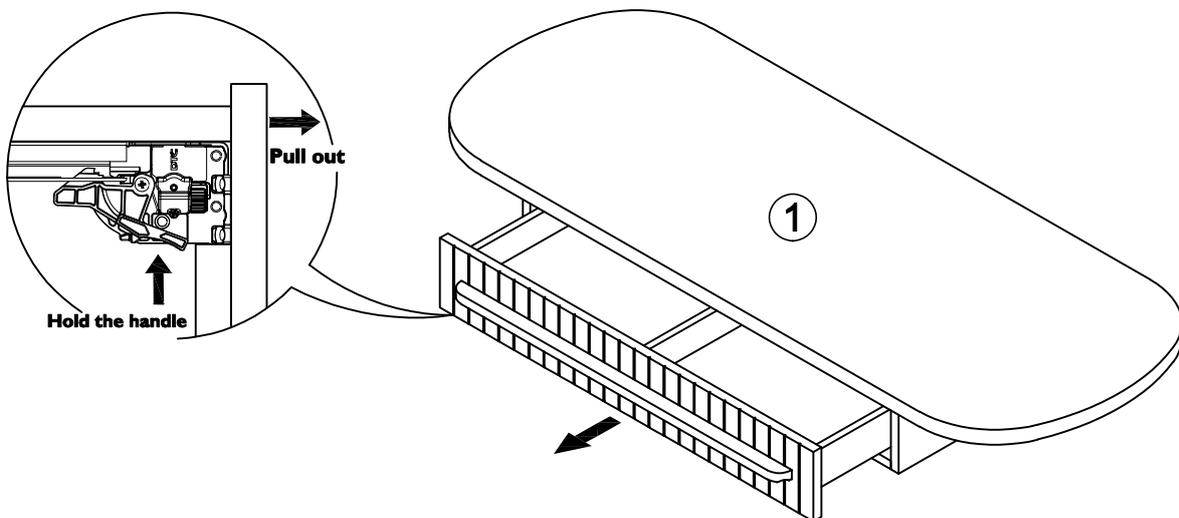


---

## Step By Step Assembly Instructions

---

**Step 3** Attach top frame (1) onto side frame left (2) & side frame right (3) as shown. Ensure wooden dowels (A) are aligned correctly with the pre-drilled holes on top frame (1) before attaching.

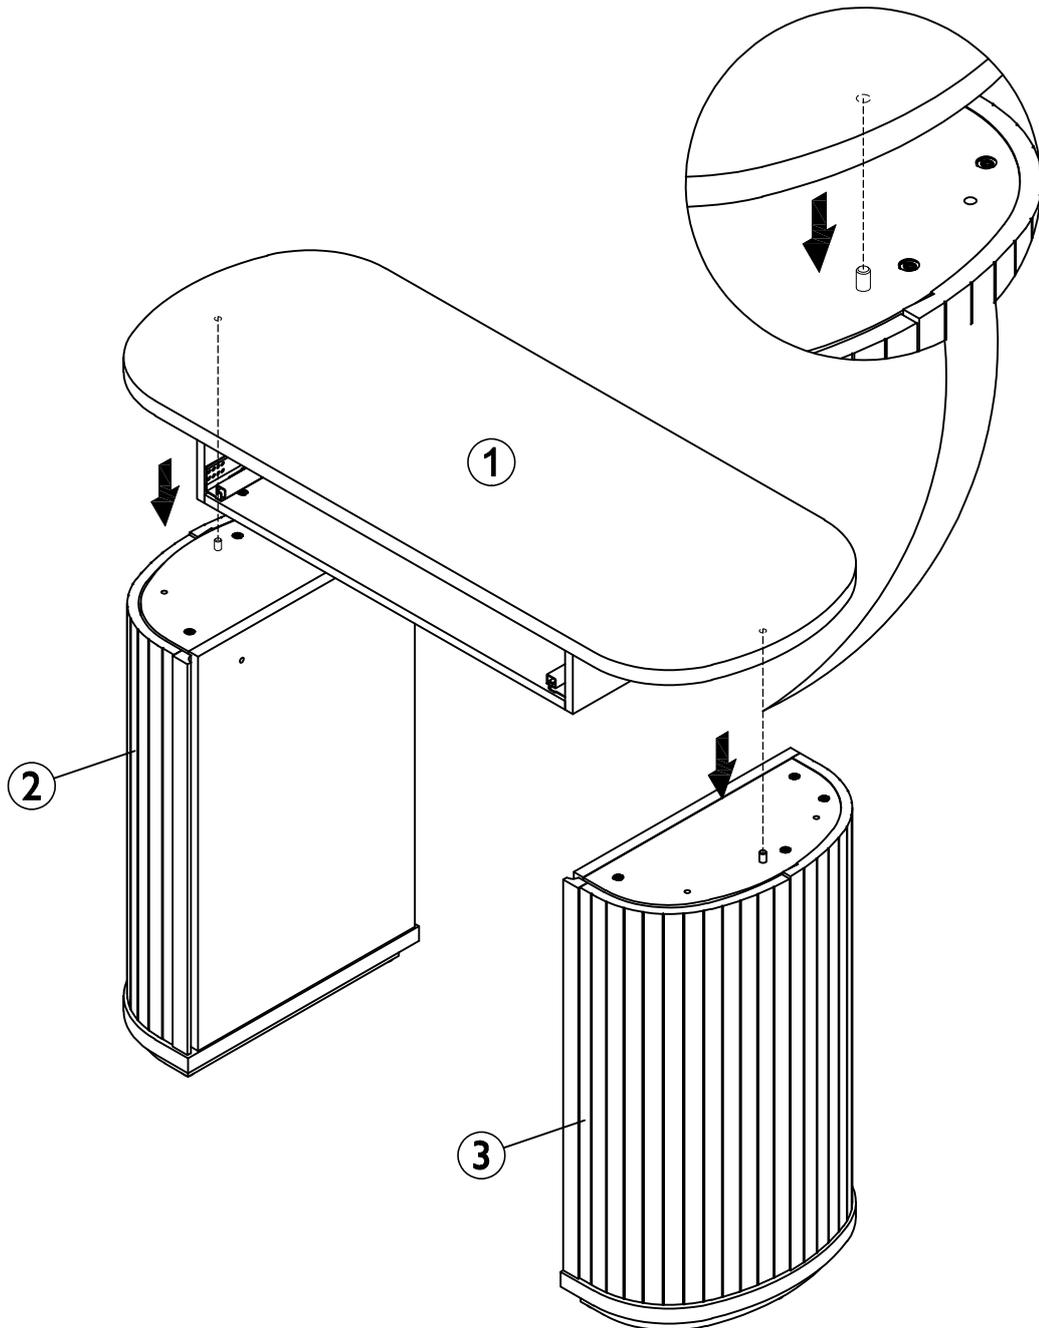

# Step By Step Assembly Instructions

- Step 4**
- 4.1 : Open the doors of the side frame left (2) & side frame right (3) as shown.
  - 4.2 : Secure part (2) to part (1) by using 4x hex head bolts (B) as shown. Use allen key (C) to turn fittings (B) clockwise to fix.
  - 4.3 : Secure part (3) to part (1) by using 4x hex head bolts (B) as shown. Use allen key (C) to turn fittings (B) clockwise to fix.

Fitting




B x 8



C x 1

**Step 4.1**

**Step 4.2 & 4.3**

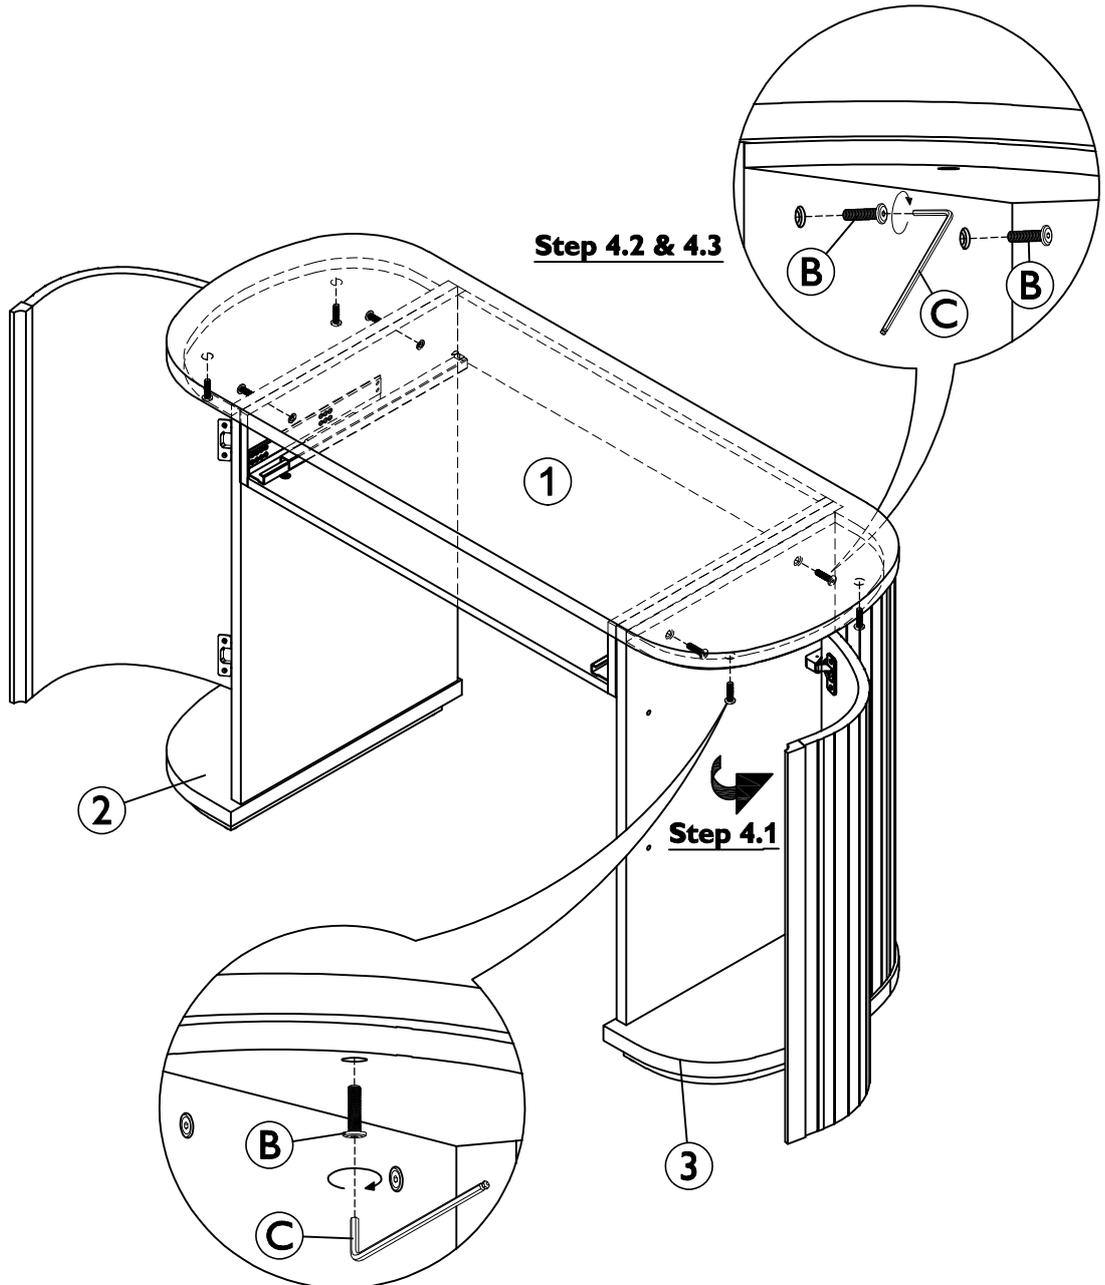

**Step 4.2 & 4.3**


# Step By Step Assembly Instructions

- Step 5** 5.1 : Screw 12x shelf pins (D) into the inset fittings in side frame left (2) & side frame right (3) as shown.
- 5.2 : Slide parts (4) & (5) into the side frame left (2) & side frame right (3). Ensure the notches on shelves are facing down, then lower them onto the pins of shelf pins (D) as shown.

Fitting



D x 12

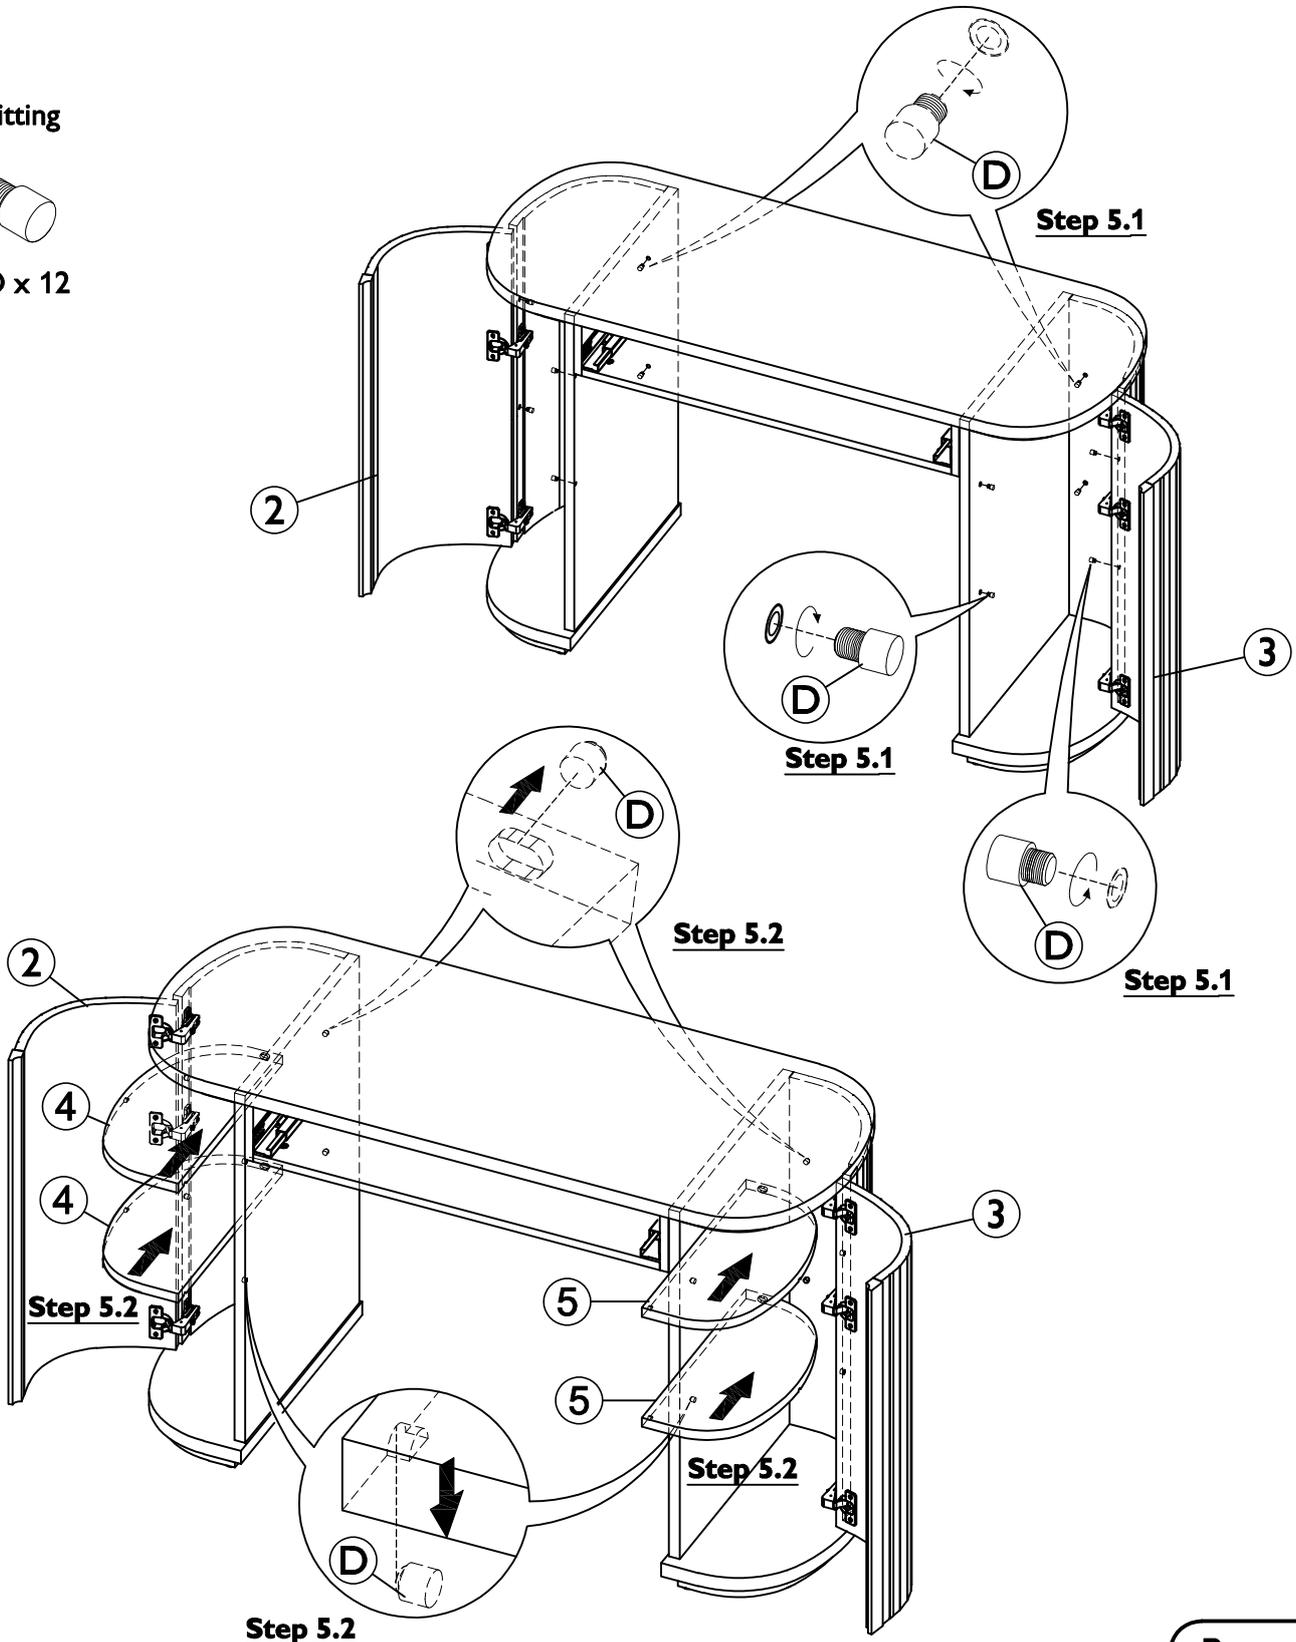


---

## Step By Step Assembly Instructions

---

**Step 6** Insert the drawers into the unit as shown. (Lay the drawer bottom onto the slide then push the drawer into the cabinet)

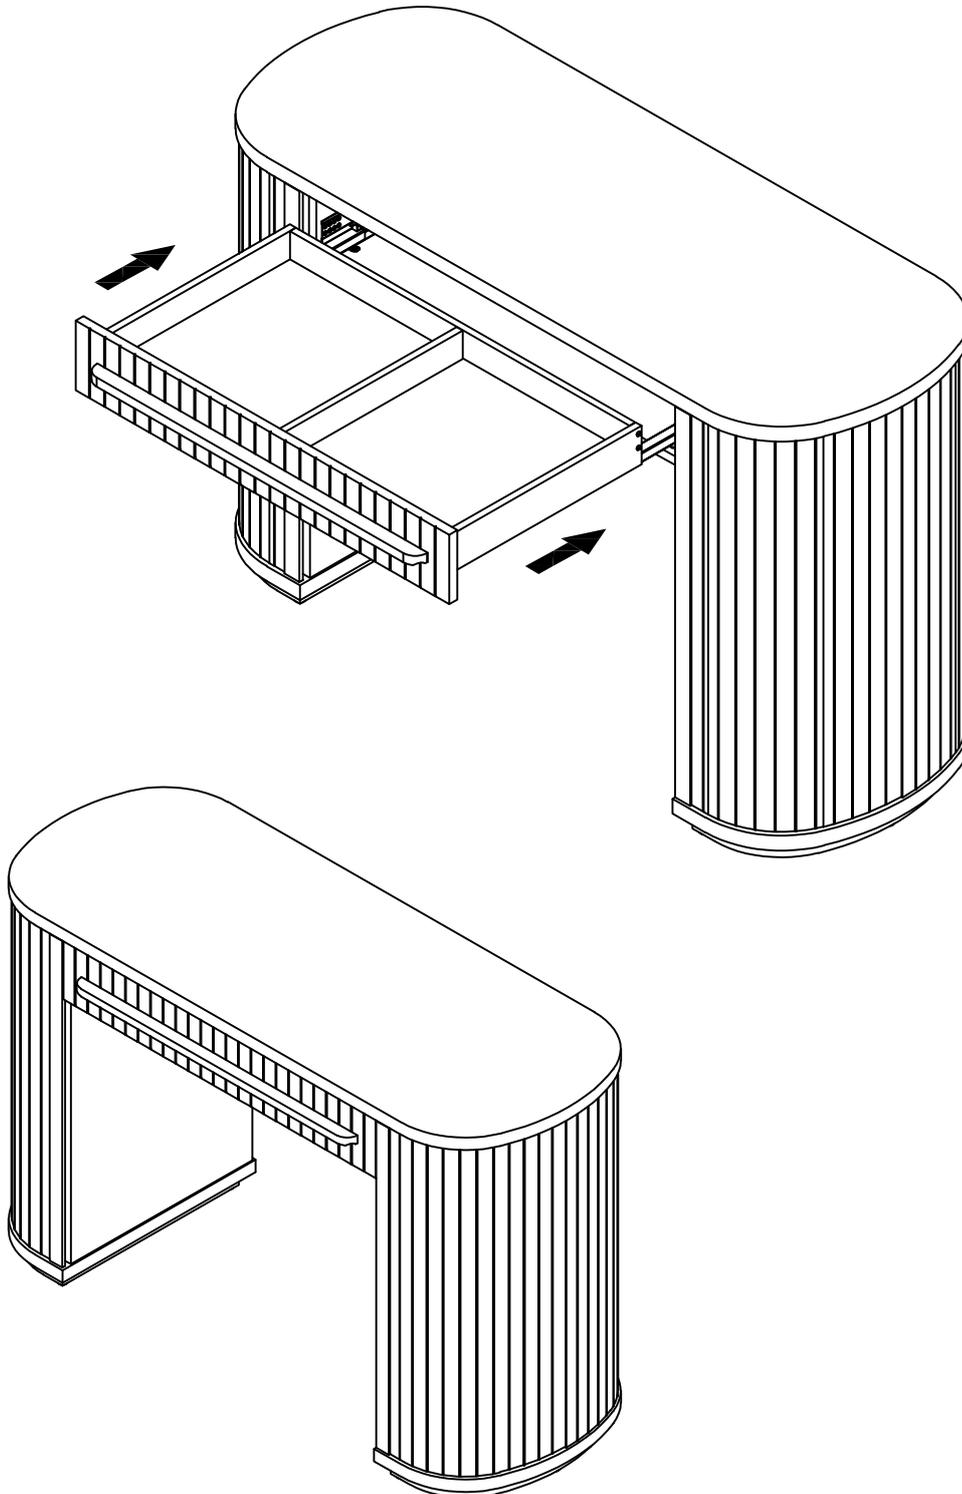

**Assembly is complete**


---

# HINGE ADJUSTMENT INSTRUCTIONS

---

## LATERAL ADJUSTMENT


by screw adjustment.

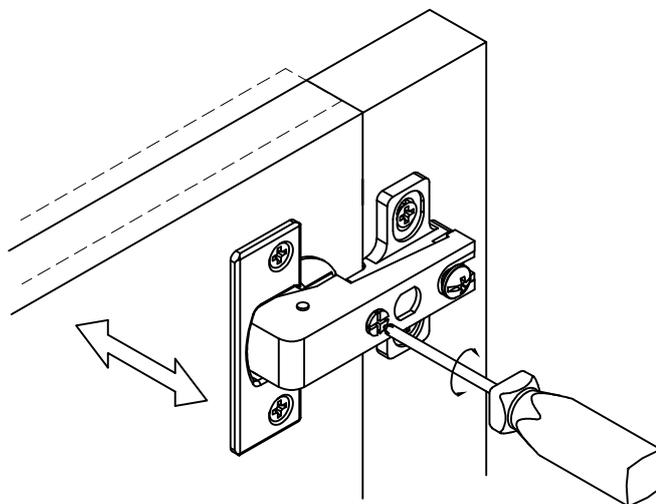

---

## FRONT-TO-BACK


by slackening and retightening the hinge-arm mounting screw.

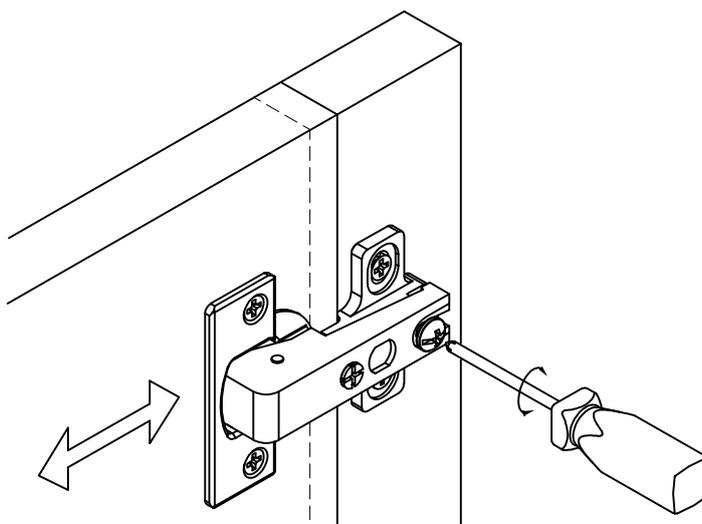

---

## VERTICAL ADJUSTMENT


via slots on mounting plate by slackening and retightening the screws on mounting plate

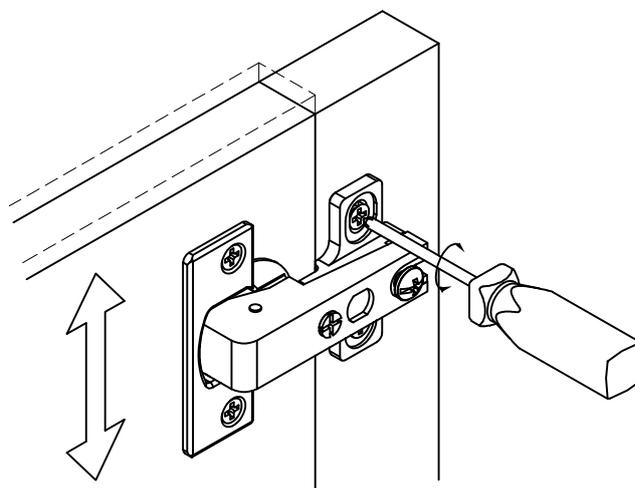


# UNDERMOUNT DRAWER GLIDE ADJUSTMENT INSTRUCTION

## ASSEMBLE


Lay the drawer bottom onto the slide then push the drawer into the cabinet

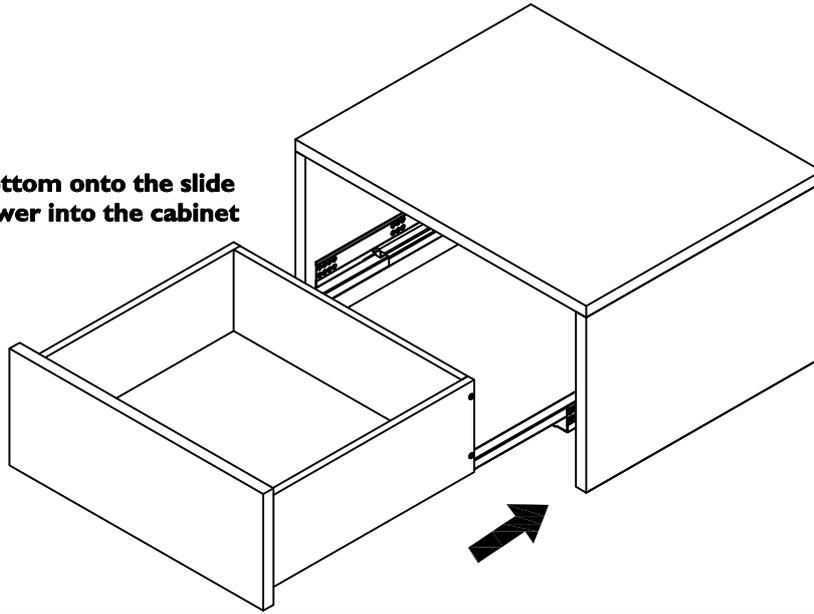

## HEIGHT ADJUSTMENT

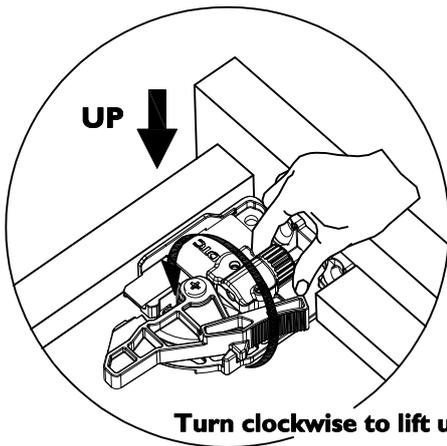


Turn clockwise to lift up

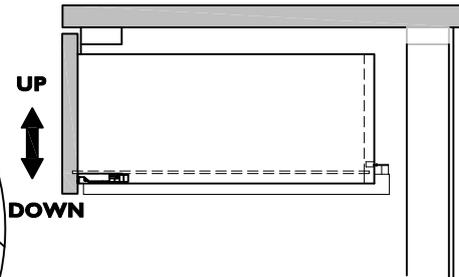

Turn counterclockwise to down

## REMOVE

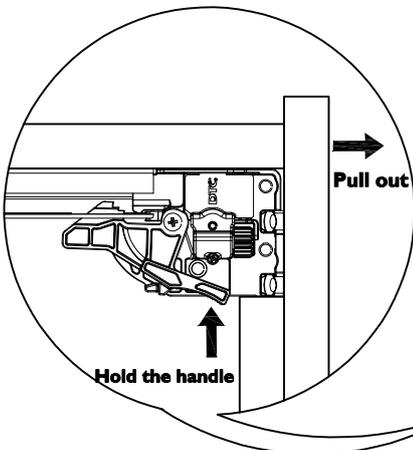

For removal, extend the runner all the way out. Unlock by hold the handle and pull out the drawer.

