


# LAMP TABLE

Stock number: 3049-04


Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

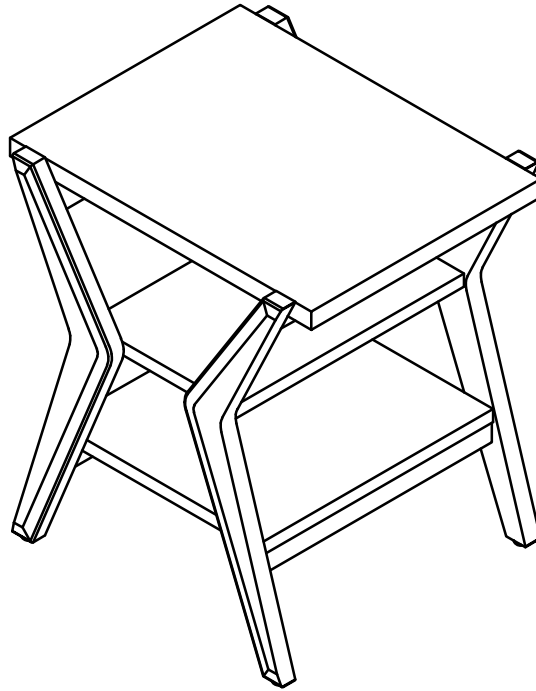


## Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.


### Necessary Tools : Pozi screwdriver



Pz 2 or Pz 3

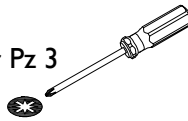

(Included)



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

This product takes approximately **30 MINUTES** to assemble with **2 PEOPLE**.






All assembly should be performed on a flat, stable, clean and soft surface.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product







The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

**IMPORTANT:** Retain these instructions for future reference.

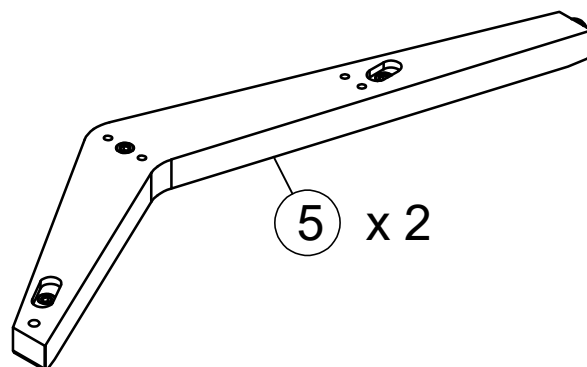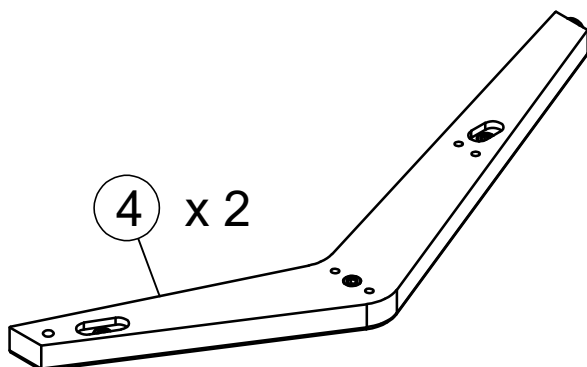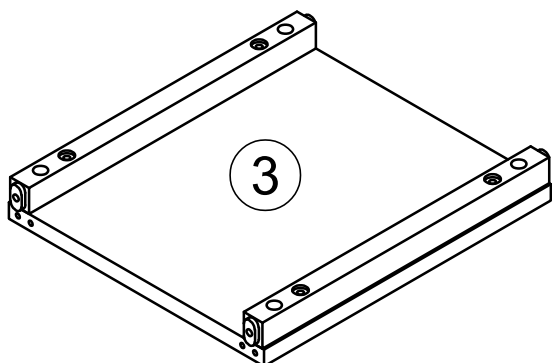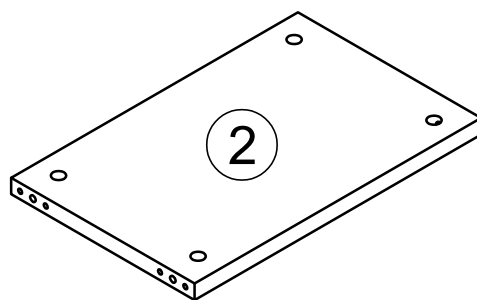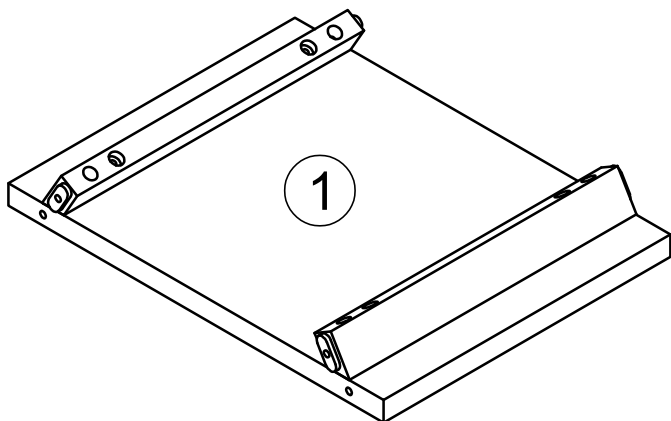Page : 1



## Fittings and parts checklist

| Item | Description             | Qty.   | Item | Description              | Qty.   |
|------|-------------------------|--|------|--------------------------|--|
| 1    | Top frame               | x 1  | 4    | Leg A                    | x 2  |
| 2    | Fixed Shelf A           | x 1  | 5    | Leg B                    | x 2  |
| 3    | Fixed Shelf Frame B     | x 1  |      |                          |  |
|      |                         |  |      |                          |  |
| A    | Wooden dowel<br>Ø8x30mm |  x 4  | D    | Housing<br>Ø15x13.5mm    |  x 12 |
| B    | Wooden dowel<br>Ø6x30mm |  x 16 | E    | Grub screw<br>M8x8mm     |  x 12 |
| C    | Steel dowel<br>Ø7x52mm  |  x 12 | F    | Allen key<br>M4x30x110mm |  x 1  |

# Step By Step Assembly Instructions

## Step

1

1.1: Lay all parts on a flat, stable, clean and soft surface.

1.2 : Insert 4x dowels (A) into the pre-drilled holes on top frame (1) as shown.

1.3 : Insert 16x dowels (B) into the pre-drilled holes on fixed shelf A (2), fixed shelf frame B (3) as shown.


Fitting



A x 4




B x 16

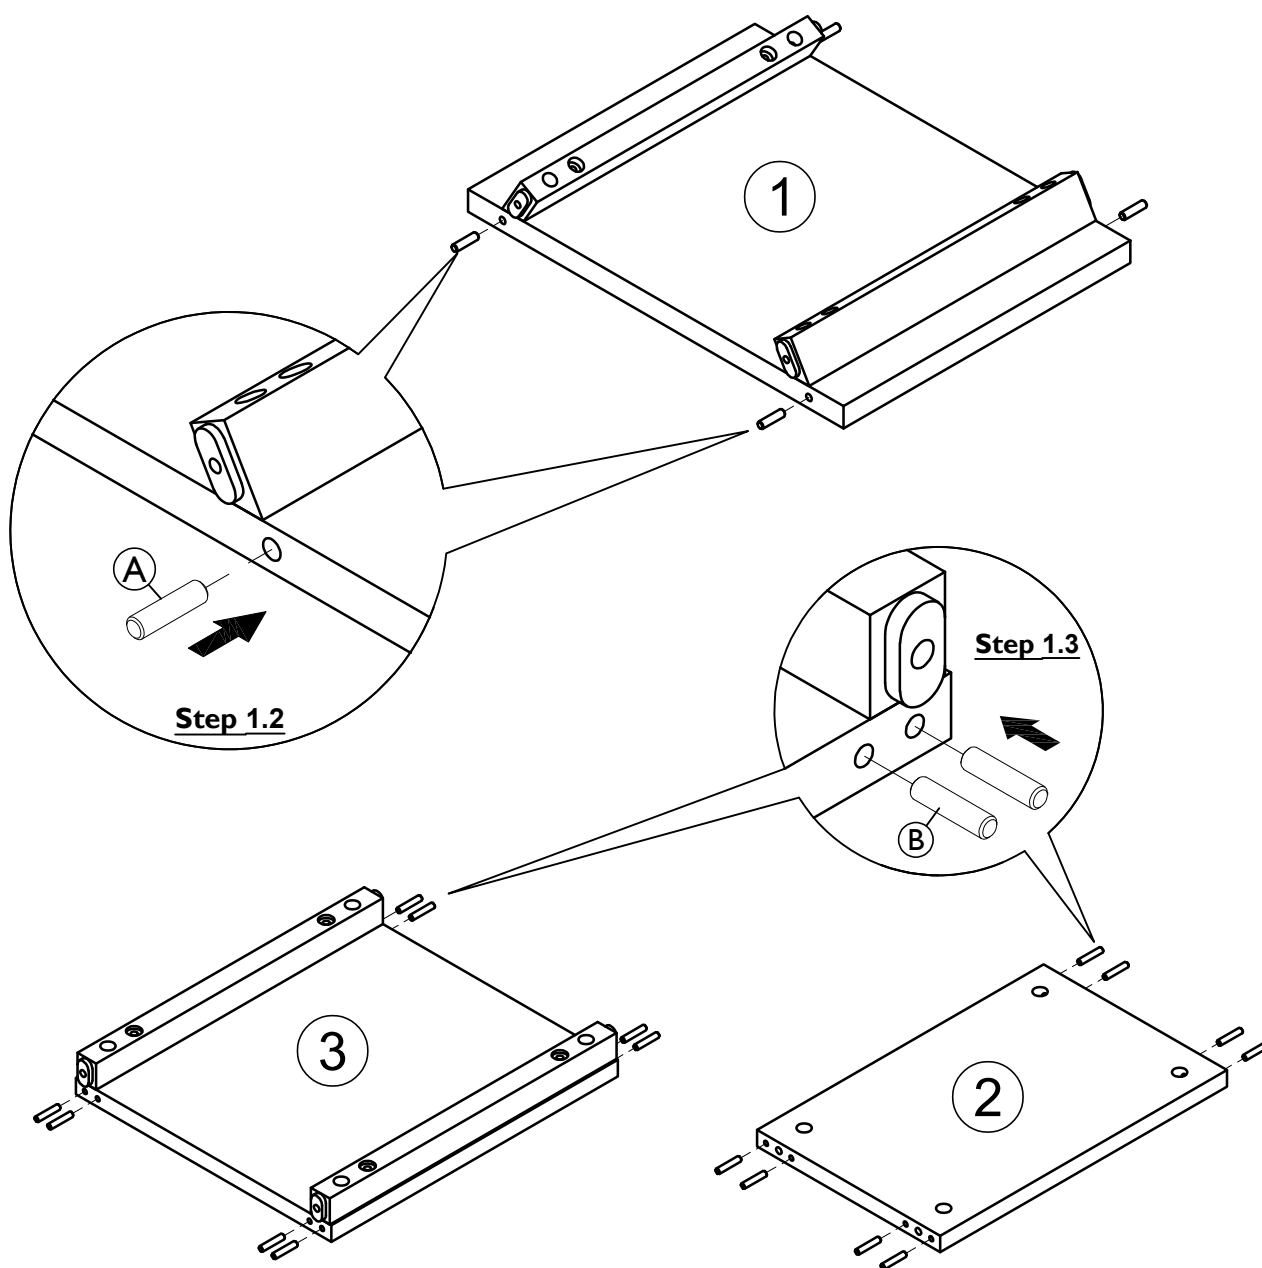


## Step By Step Assembly Instructions

**Step 2** Attach 12x steel dowels (C) into legs A (4) & legs B (5) by screwing fittings (C) into the inset fittings that are located on parts (4) & (5) as shown. Use a pozi screwdriver to turn fittings (C) clockwise to fix.

## Fitting



C x 12

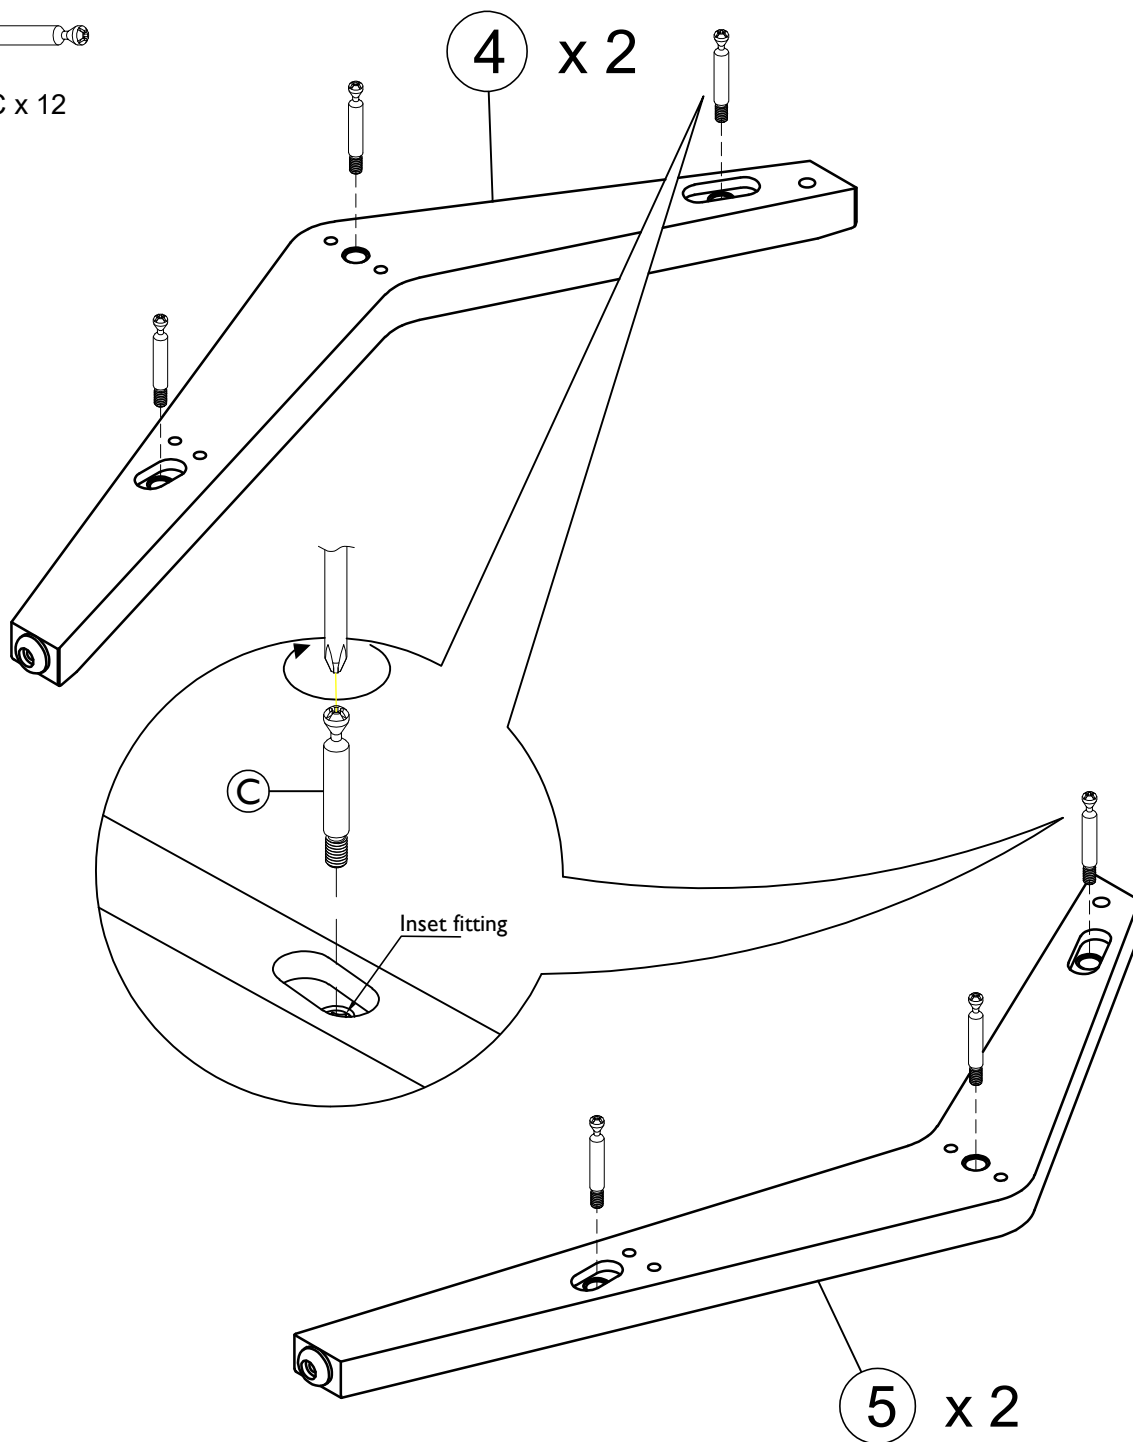


# Step By Step Assembly Instructions

- Step 3**
- 3.1 : Attach 6x housings (D) into the pre-drilled holes on parts (1), (2), (3) as shown.
- 3.2 : Attach parts (1), (2), (3) onto leg A (4) & leg B (5) as shown. Ensure steel dowels (C) and wooden dowels (A), (B) are aligned correctly with the holes of mating parts before attaching.

Fitting



D x 6

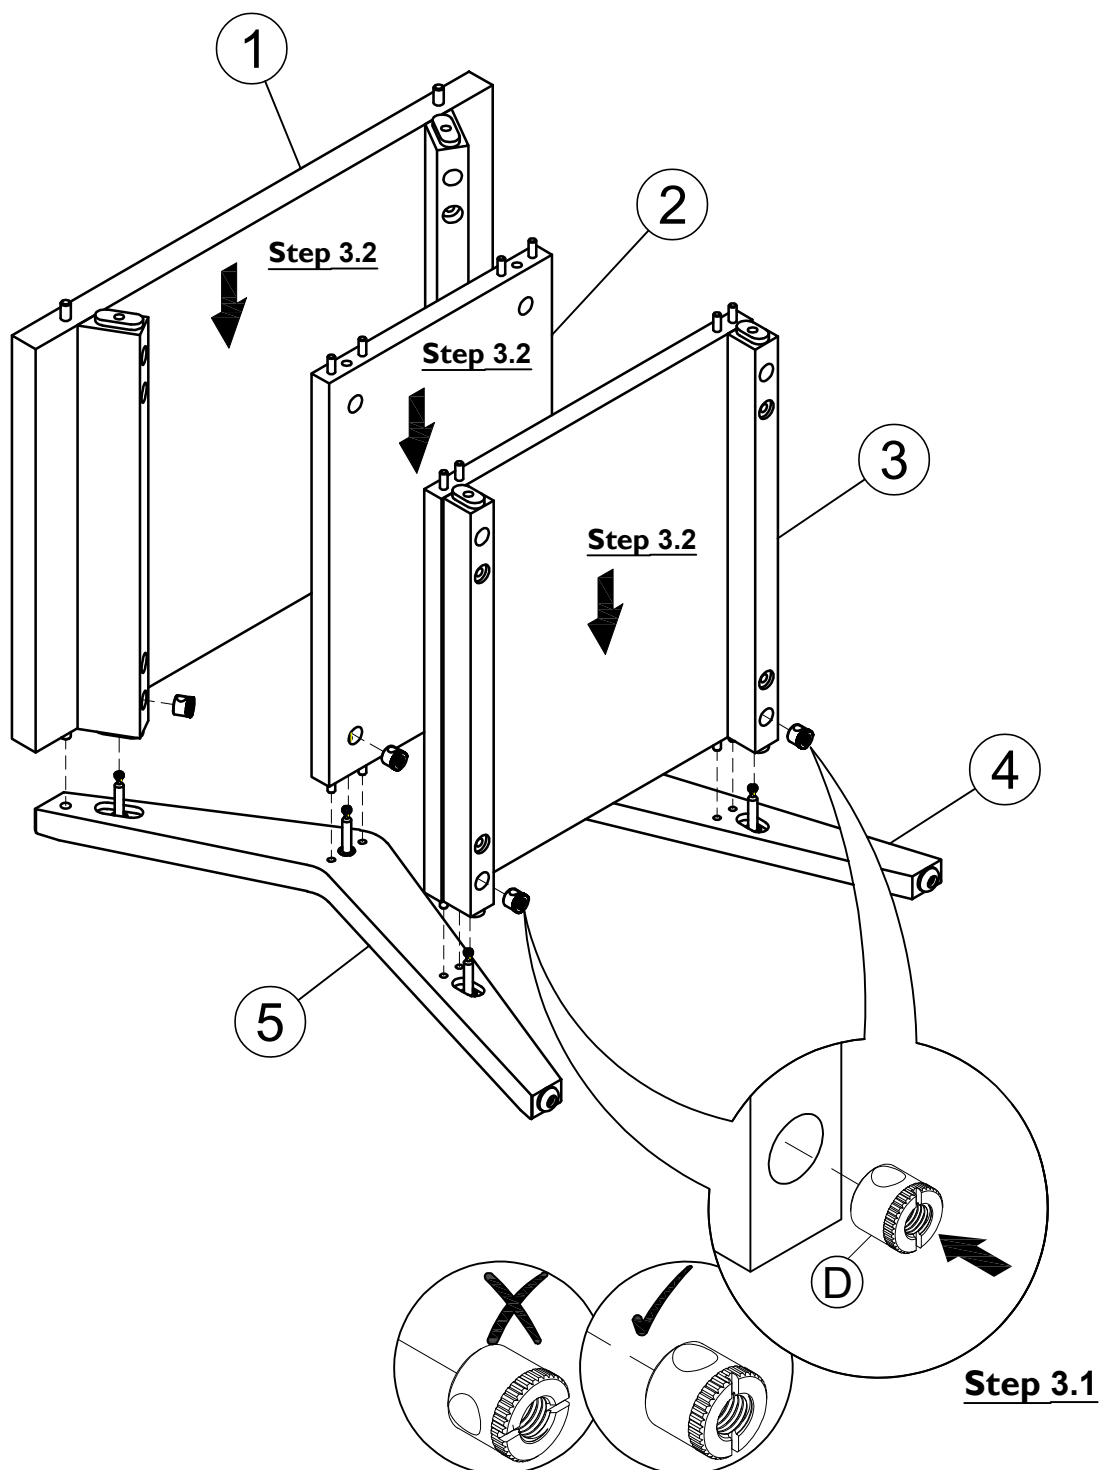

## Step By Step Assembly Instructions

**Step 4** Secure parts (1), (2), (3), to parts (4) & (5) using 6x grub screws (E) as shown. Use an allen key (F) to turn fittings (E) clockwise to fix.


Fitting



E x 6



F x 1

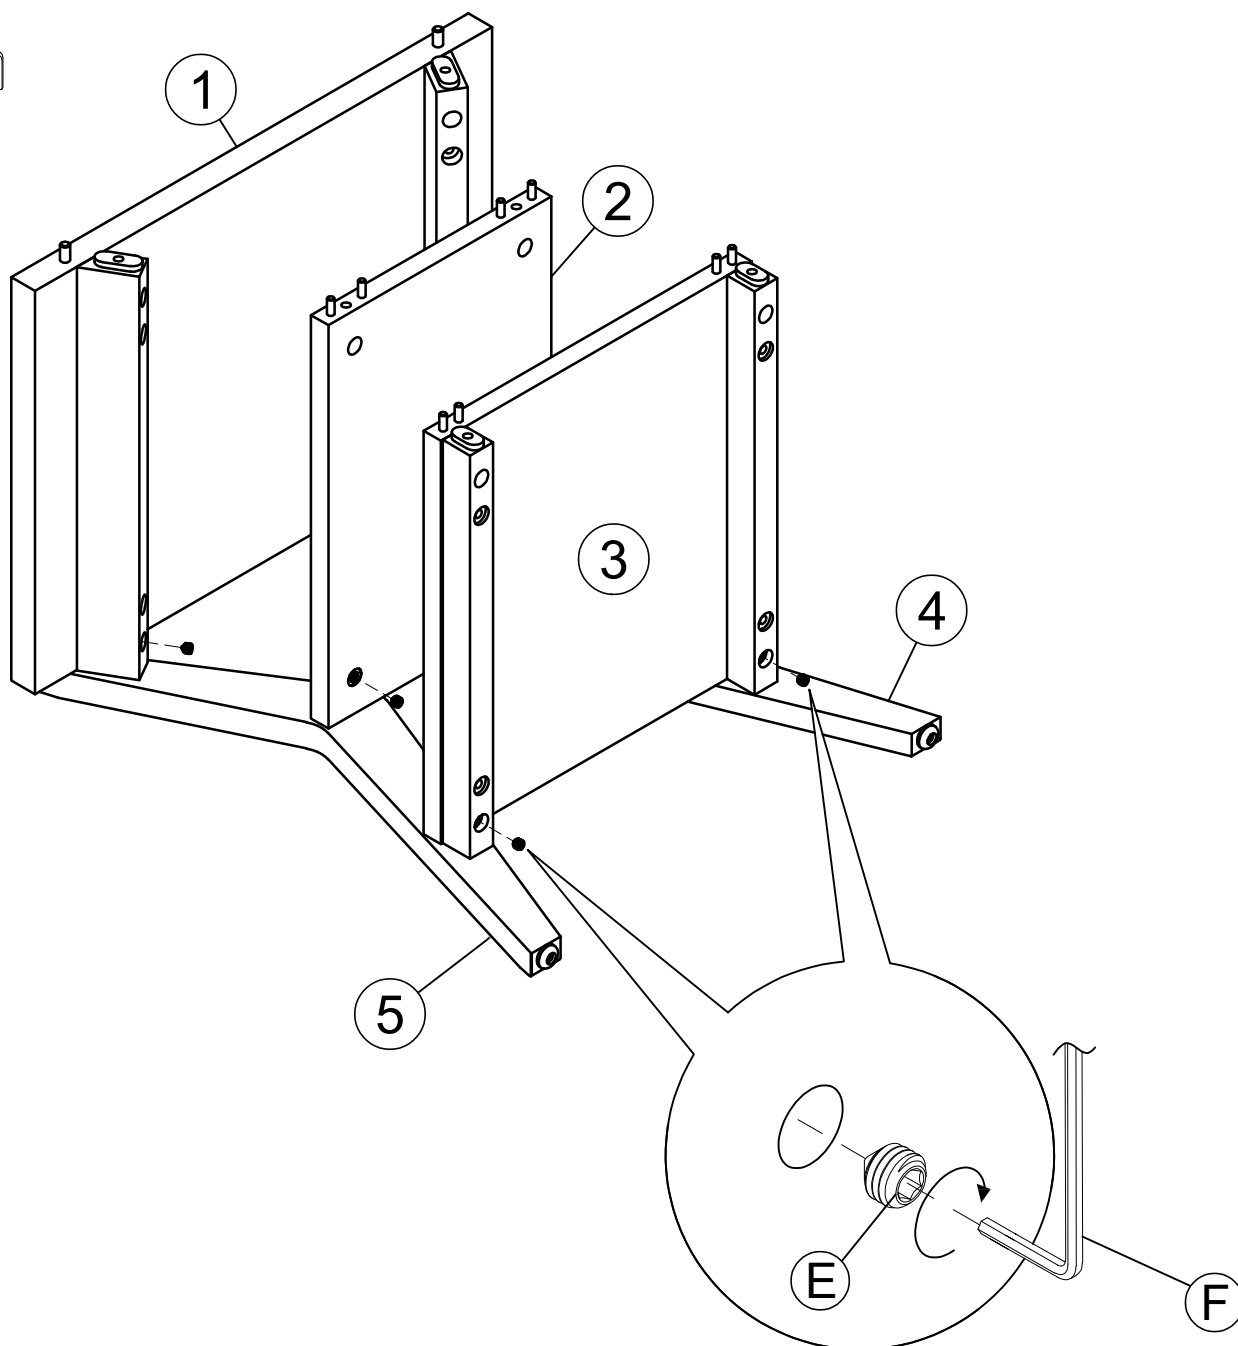

# Step By Step Assembly Instructions

## Step 5


5.1 : Attach 6x housings (D) into the pre-drilled holes on parts (1), (2), (3) as shown.

5.2 : Attach leg A (4) & leg B (5) to the structure assembled in **Step 4** as shown. Ensure steel dowel (C) and wooden dowels (A), (B) are aligned correctly with the holes of mating parts before attaching.

Fitting



D x 6

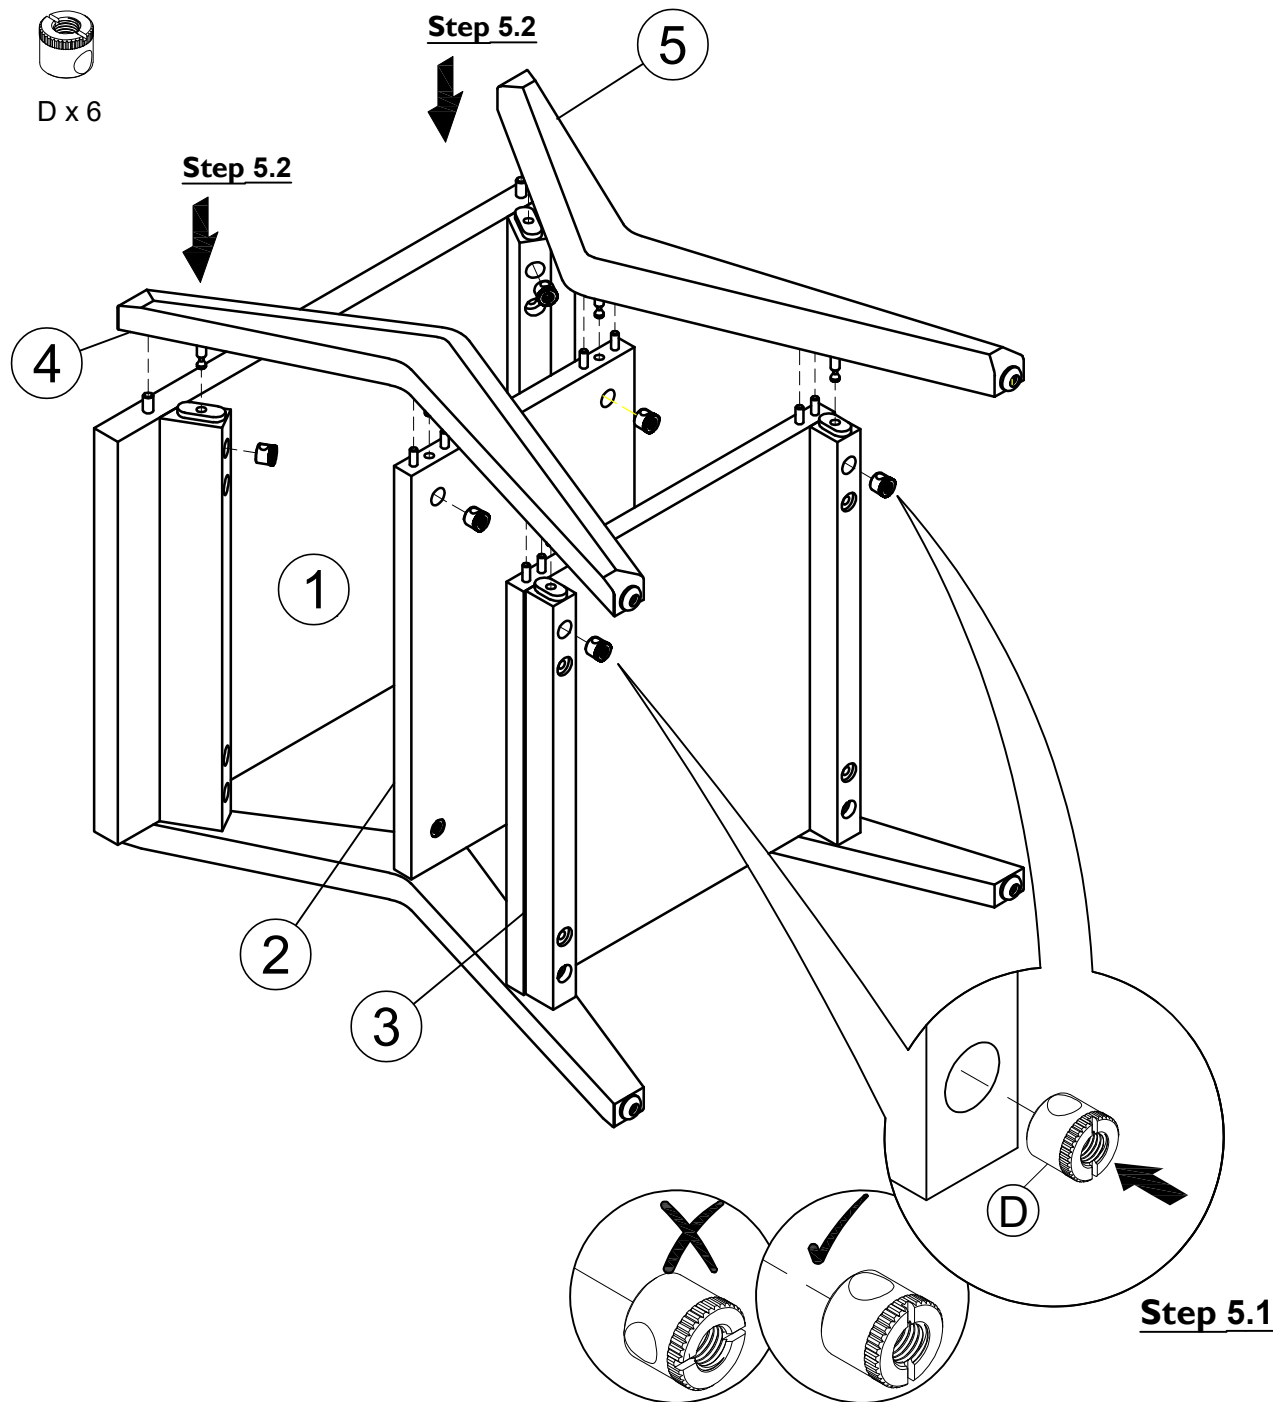



## Step By Step Assembly Instructions

- Step 6** 6.1 : Secure parts (4) & (5) to parts (1), (2), (3), using 6x grub screws (E) as shown.  
Use an allen key (F) to turn fittings (E) clockwise to fix.  
6.2 : Stand the unit up right.

Fitting



E x 6



F x 1

