
#### **OPEN ENTERTAIMENT UNIT**

Stock number: 3049-33

Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

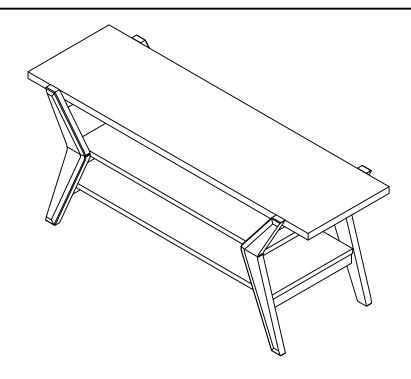

#### Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.





Pz 2 or Pz 3

(Included)



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

This product takes approximately 30 MINUTES to assemble with 2 PEOPLE.


All assembly should be performed on a flat, stable, clean and soft surface.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product

The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

**IMPORTANT:** Retain these instructions for future reference.

Page: 1

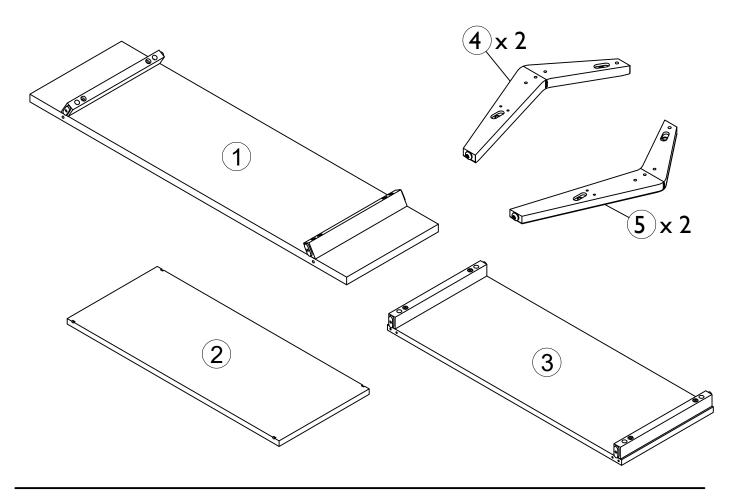

# Fittings and parts checklist

| Item | Description          | Qty. |  | ltem | Description              | Qty. |
|------|----------------------|------|--|------|--------------------------|------|
| 1    | Top frame            | x 1  |  | 4    | Leg A                    | x 2  |
| 2    | Adjustable shelf     | x 1  |  | 5    | Leg B                    | x 2  |
| 3    | Shelf frame          | x 1  |  |      |                          |      |
|      |                      |      |  |      |                          |      |
| Α    | Wooden dowel Ø8x30mm | x 4  |  | Ε    | Housing Ø15x13.5mm       | x 8  |
| В    | Wooden dowel Ø6x30mm | x 8  |  | F    | Grub screw M8x8mm        | x 8  |
| С    | Steel dowel Ø7x52mm  | x 8  |  | G    | Allen key<br>M4x30x110mm | x 1  |
| D    | Shelf pin            | x 4  |  |      |                          |      |



- Step 1 1.1: Lay all parts on a flat, stable, clean and soft surface.
  - 1.2: Insert 4x dowels (A) into the pre-drilled holes on top frame (1) as shown.
  - 1.3: Insert 8x dowels (B) into the pre-drilled holes on shelf frame (3) as shown.


**Fitting** 



 $A \times 4$ 




 $B \times 8$ 

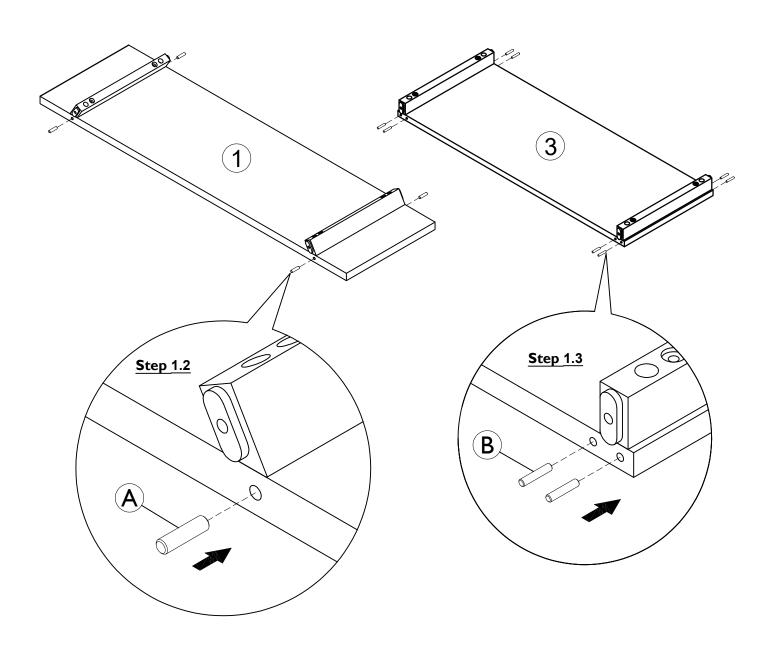

Step 2

- 2.1 : Attach 8x steel dowels (C) into legs A (4) & legs B (5) by screwing fittings (C) into the inset fittings that are located on parts (4) & (5) as shown. Use a pozi screwdriver to turn fittings (C) clockwise to fix.
- 2.2 : Screw 4x shelf pins (D) into the inset fittings in legs (4), (5) as shown.

**Fitting** 

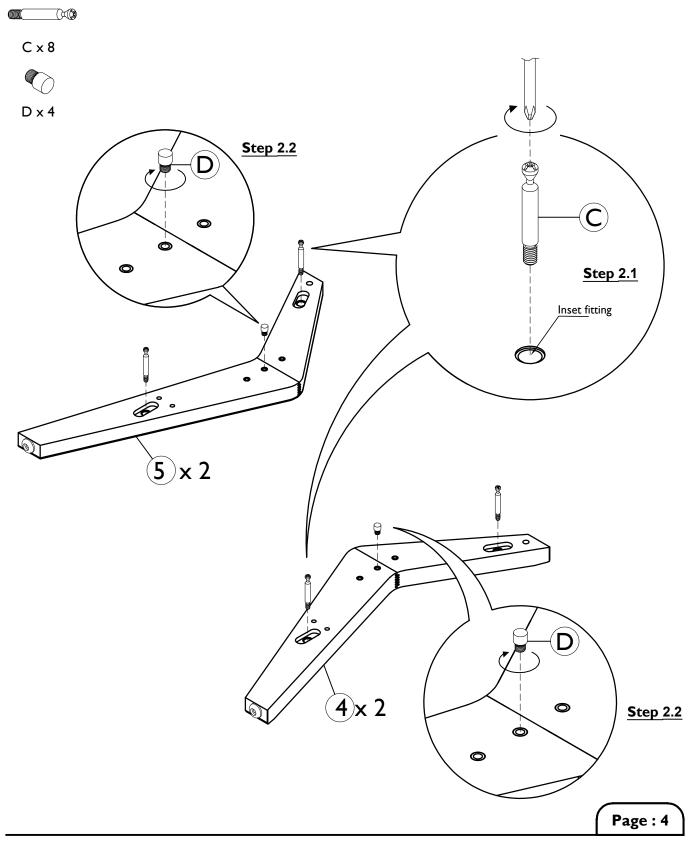


# Step 3

- 3.1: Insert 4x housings (E) into the pre-drilled holes on top frame (1) and shelf frame (3) as shown.
- 3.2 : Attach top frame (1) and shelf frame (3) onto leg A (4) & leg B (5) as shown. Ensure steel dowel (C) and wooden dowels (A), (B) are aligned correctly with the holes of mating parts before attaching.

**Fitting** 



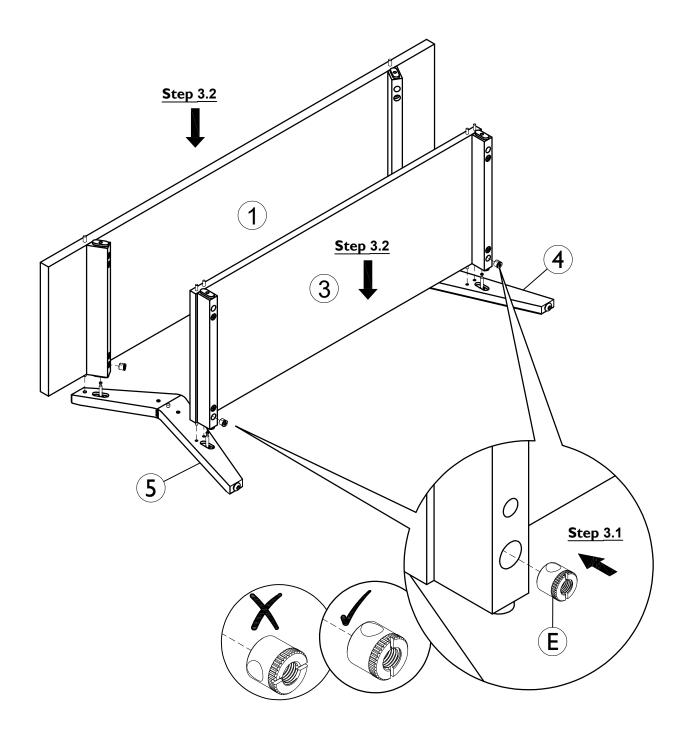

Step 4 Secure parts (1), (3) to parts (4) & (5) using 4x grub screws (F) as shown. Use an allen key (G) to turn fittings (F) clockwise to fix. Fitting **G** x 1 3

Page: 6


#### Step 5



- 5.1 : Attach 4x housings (E) into the pre-drilled holes on top frame (1) and shelf frame (3) as
- 5.2 : Attach leg A (4) & leg B (5) to the structure assembled in **Step 4** as shown. Ensure steel dowel (C) and wooden dowels (A), (B) are aligned correctly with the holes of mating parts before attaching.


**Fitting** 



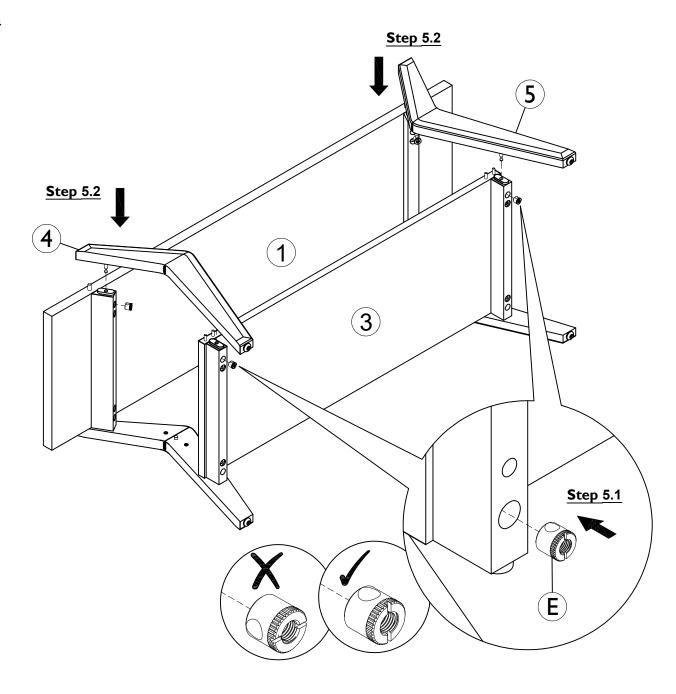

Step 6 6.1: Secure parts (4) & (5) to parts (1), (3) using 4x grub screws (F) as shown. Use an allen key (G) to turn fittings (F) clockwise to fix.

6.2: With help of assistant, carefully turn the unit up right.

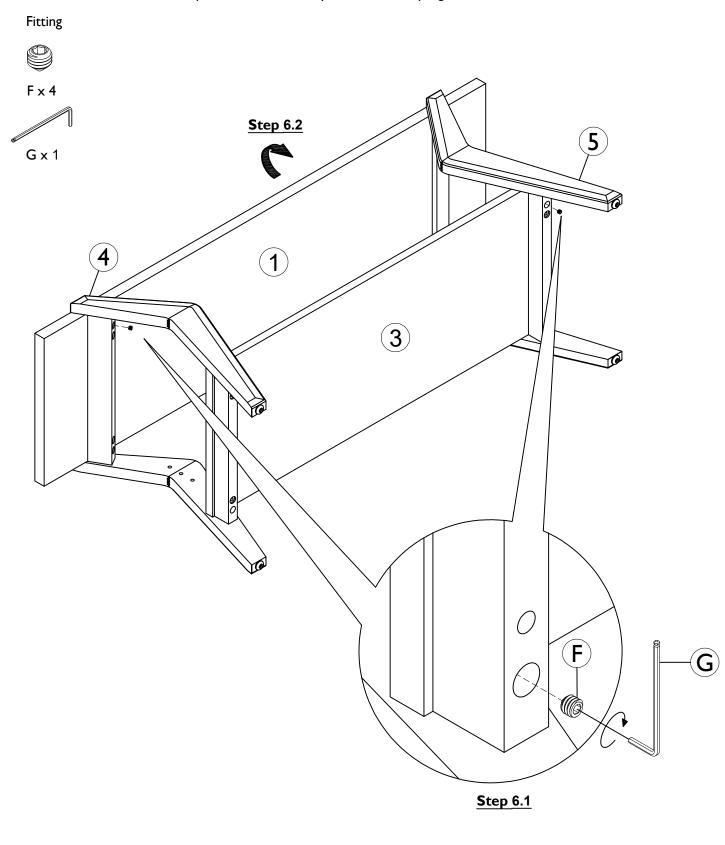

Page:8

